


BRAVOUR®

Digital code lock

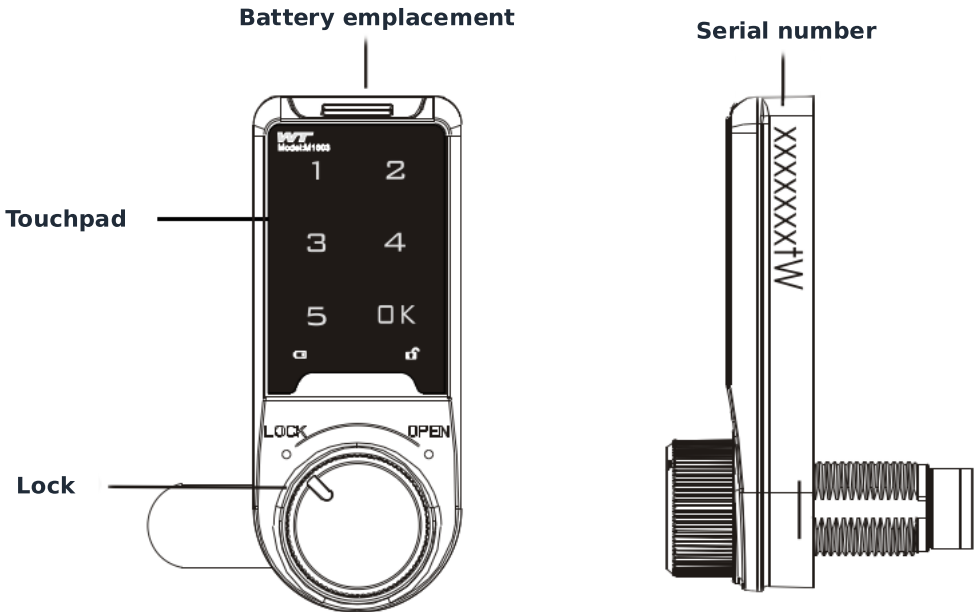

FACTORY USER CODE

1 2 3 4

FACTORY MASTER CODE

4 3 2 1

Keep this manual and the lock serial number in a safe place.

1. Lock overview

Components and indicators

Component		Location and function
Battery compartment		Located on the top. Accepts one CR2032 battery.
Identification / serial number		Visible on the side of the lock, depending on the version.
Green unlock icon		Confirms a correct code and indicates the lock status.
Battery icon		Indicates that the battery must be replaced.
Emergency power		Micro-USB port on the left side, behind the cover.

Audible and visual signals

- When a correct code is entered, one long beep sounds and the green unlock icon lights up.
- When an incorrect code is entered, three beeps sound and the green icon flashes three times.
- When a locker is in use, the green padlock icon flashes every 4 seconds.

Low battery and emergency power

- When the red battery icon lights up, replace the CR2032 battery. Pull the tab on the top to remove the battery.
- If no new battery is available, temporarily power the lock using an external battery (power bank) and a Micro-USB cable. The connector is located on the left side, behind the cover.

2. Master code and mode selection

Changing the factory master code

Always perform this procedure with the door open and check the new code before closing the locker again.

1. Enter the current master code. For the first setup, use 4321.
2. Press OK. A beep sounds and the green unlock icon lights up.
3. While the icon is lit, press and hold OK for at least 2 seconds. The green icon starts flashing.
4. Enter a new master code containing 4 to 15 digits.
5. Press OK. A long beep confirms that the code has been changed.

4321 → OK → hold OK $\geq$ 2 s → new master code → OK

Forgot your master code?

Contact Bravour and provide the serial number shown on the lock. Depending on the version, the identification may also be visible on the side of the lock.

Activating public mode

1. Enter the master code and press OK. The green icon lights up.
2. While the icon is lit, press and hold OK for at least 2 seconds. The green icon flashes.
3. Press OK once.
4. Enter 44 by pressing the 4 key twice.
5. Press OK.

Master code → OK → hold OK $\geq$ 2 s → OK → 44 → OK

If a long beep sounds at the end of this procedure, public mode was already activated.

3. Using public mode

In public mode, each user chooses their own temporary code. After opening, the locker is ready for the next user.

Closing a locker

1. Press OK.
2. Enter a personal code containing 4 to 15 digits.
3. Press OK.
4. Close the door within 5 seconds.

OK → personal code → OK → close within 5 s

Opening a locker

1. Enter the personal code used when the locker was closed.
2. Press OK.
3. Open the door. The lock is then ready for the next user.

personal code → OK → open

Deactivating public mode

1. Enter the master code and press OK. The green icon lights up.
2. While the icon is lit, press and hold OK for at least 2 seconds. The green icon flashes.
3. Press OK once.
4. Enter 43.
5. Press OK.

Master code → OK → hold OK $\geq$ 2 s → OK → 43 → OK

4. Public mode: special situations

Locker closed without a saved code

If the door was accidentally closed without a code being saved, proceed as follows:

1. Press OK.
2. Enter a personal code containing 4 to 15 digits.
3. Press OK.
4. Open the door.
5. Place the device in the locker and close the door again.

OK → new code → OK → open → place device → close

Forgotten personal code or locker accidentally closed

The administrator can open the locker using the master code. After the locker has been opened with the master code, the user code is automatically reset to the factory code 1234.

1. Press OK.
2. Enter the master code.
3. Press OK.
4. Open the door.

OK → master code → OK → open

Do not give the master code to users. This code is intended exclusively for the person responsible for the lockers.

Checking whether a locker is already in use

If the green padlock icon flashes every 4 seconds, the locker is already in use. Choose another locker.

5. Using private mode

In private mode, one fixed user code is permanently assigned to the locker.

First opening

1. Enter the factory user code 1234.
2. Press OK.
3. Open the locker within 3 seconds.

1234 → OK → open within 3 s

Changing the user code

Keep the door open throughout the entire programming procedure.

1. Enter the current user code. For the first setup, use 1234.
2. Press OK. A beep sounds and the green icon lights up.
3. While the icon is lit, press and hold OK for at least 2 seconds. The green icon flashes.
4. Enter a new user code containing 4 to 15 digits.
5. Press OK. A long beep confirms the change.

Current code → OK → hold OK $\geq$ 2 s → new code → OK

Closing the locker

Close the door, then turn the knob to the LOCK position.

6. Quick reference

Action	Sequence
Change master code	Master code → OK → hold OK ≥ 2 s → new code → OK
Activate public mode	Master code → OK → hold OK ≥ 2 s → OK → 44 → OK
Deactivate public mode	Master code → OK → hold OK ≥ 2 s → OK → 43 → OK
Close in public mode	OK → personal code → OK → close within 5 s
Open in public mode	Personal code → OK → open
Open with master code	OK → master code → OK → open
Change user code	Current code → OK → hold OK ≥ 2 s → new code → OK
Forgotten user code	Use the master code. The user code is automatically reset to the factory code 1234.

Bravour support

Forgot your master code? Contact Bravour and provide the serial number shown on the lock. Keep the lock and its serial number separately in case the locker can no longer be accessed.

Before permanently closing the locker

- Record the new master code in a secure place.
- Always test new codes with the door open.
- Replace the battery immediately when the red icon lights up.