
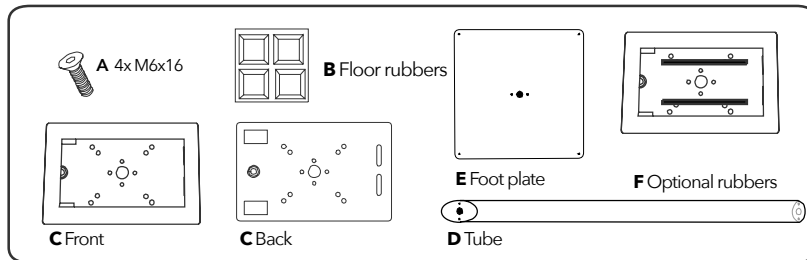
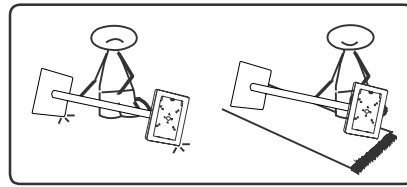
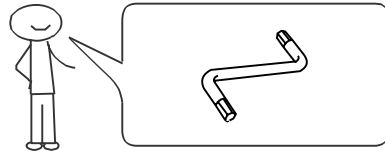


FINO & LUSO FLOORSTAND

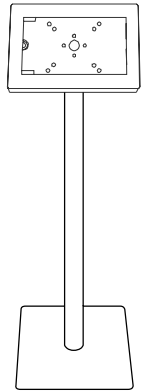


Before you start: Determine if you want to use the tablet in portrait or landscape position. In portrait position; make sure the key lock is on top.
(Or consider an additional turn disc to change the position at your request)


- 1 Place floor rubbers [B] underneath the foot plate [E]
- 2 Fit plate [E] on flat side tube [D]; Use [A] M6 x 16
- 3 Fit casing [C] on the diagonal side tube [D].; Use [A] M6 x 16
- 4 Optional: Guide power cable through hole in casing and tube to bottom.
- 5 Position tablet into casing by sliding it in from the top or side.
- 6 Position closing part into the casing and lock with built in key lock.

Optional: If the casing isn't tight fit around the tablet, place the optional rubbers as shown on the picture [F]. (See manual - Fino placing the rubbers)


1

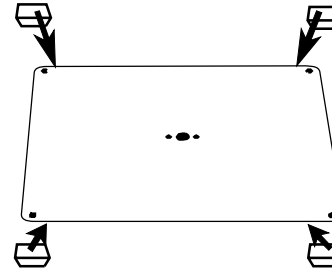


2

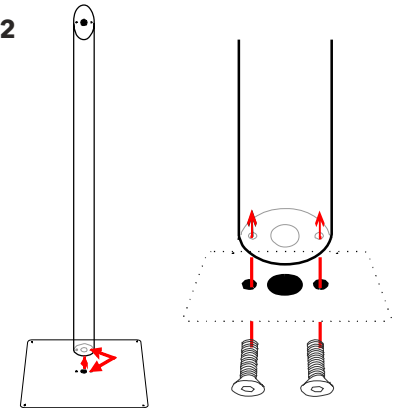


3

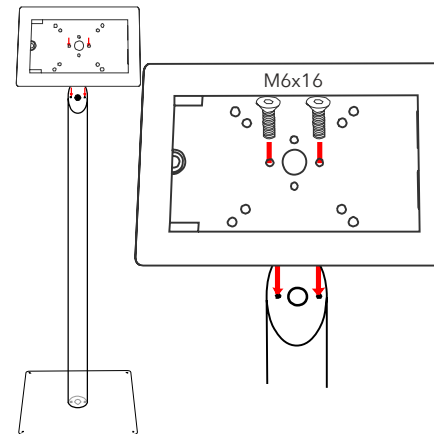

4

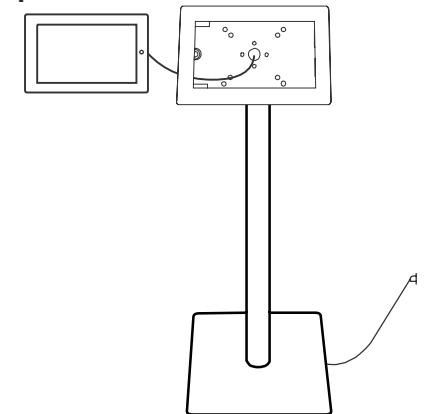

5

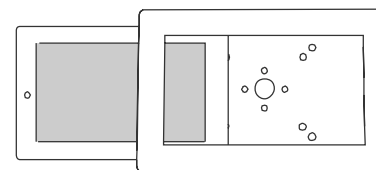

6

