


Turn Module Fino & Lusso

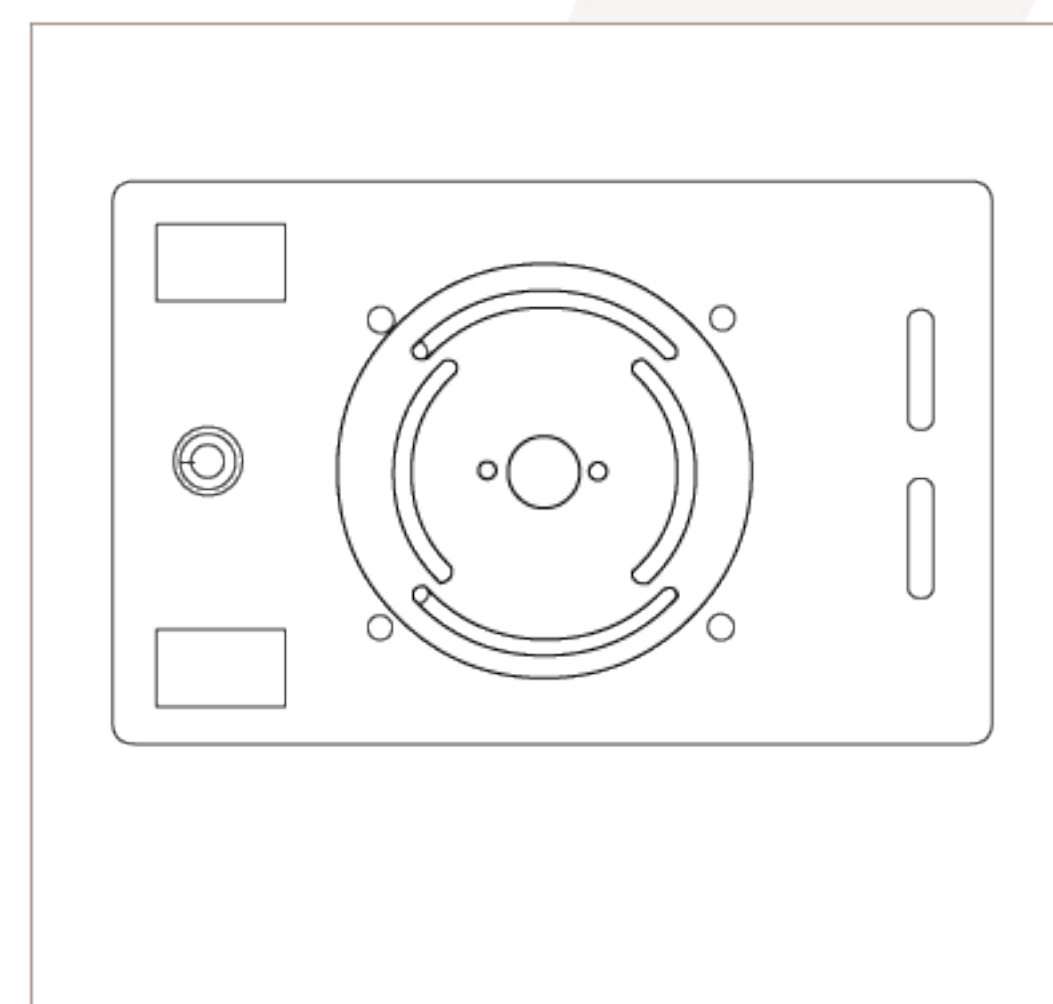

1

Place 2 M6 countersunk Hexagon screws in the back side of the turn module and place them over the VESA motif of your tablet, screws facing up.

2

Place the remaining 4 M6 screws from inside the casing **through** the turn module according to the illustration. Align all the screws to the right side of the gap


3

Loosely fasten the 4 screws with the 4 nuts. The tighter the nuts, the harder the turning will be.


4

Through the holes in the VESA motif of your casing, fasten the 2 M6 screws from step 1 to the tube.


Content

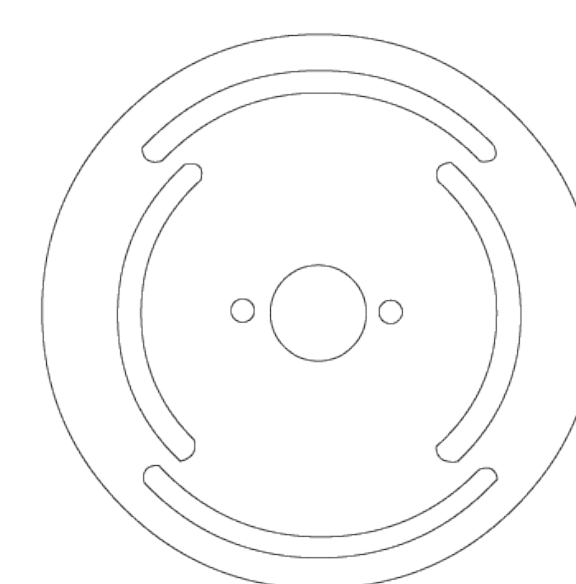

1 clear PET G plastic turn module



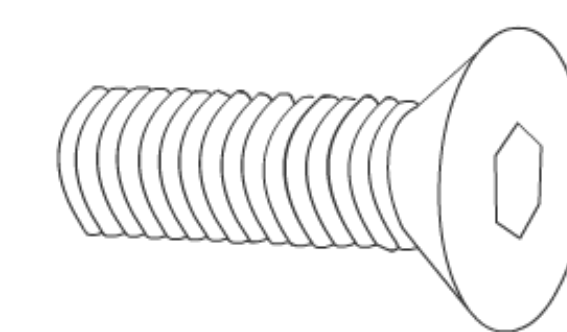


6 hexagon screws M6

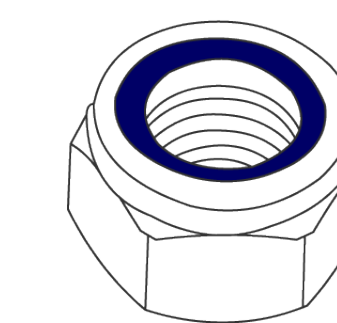

4 Nuts M6



Necessities

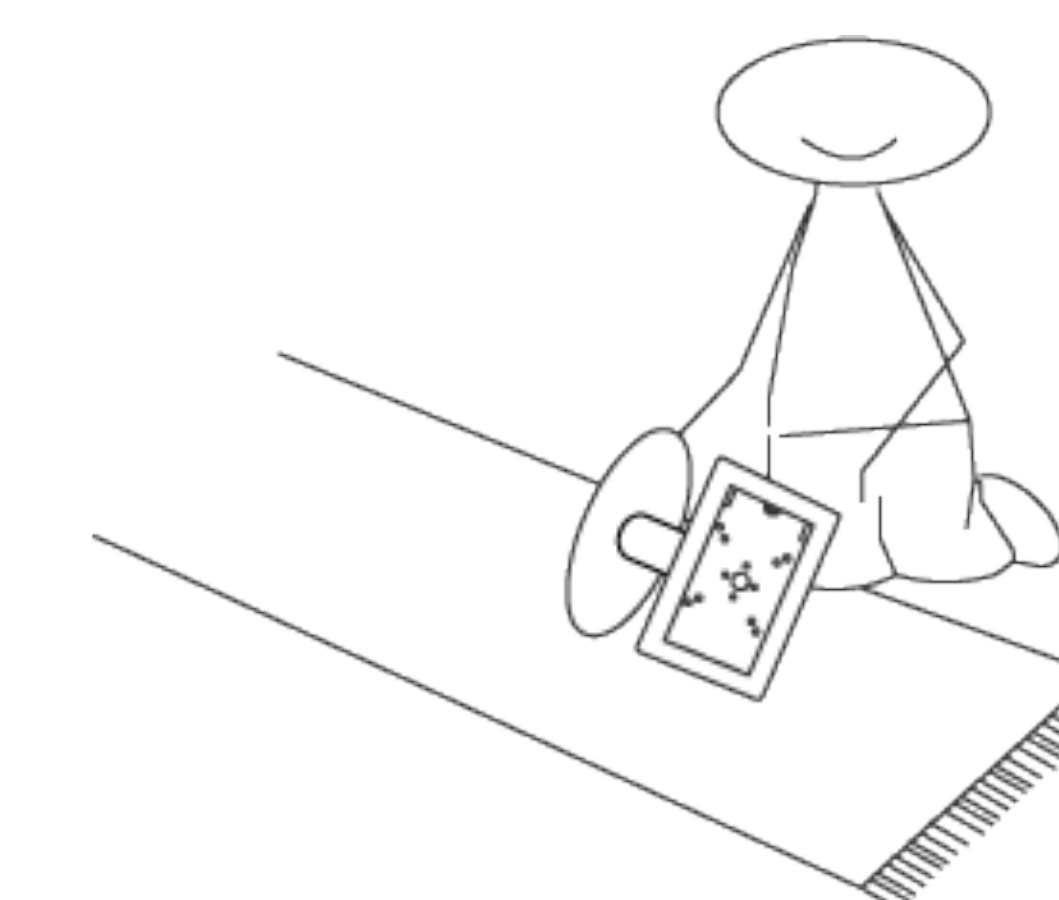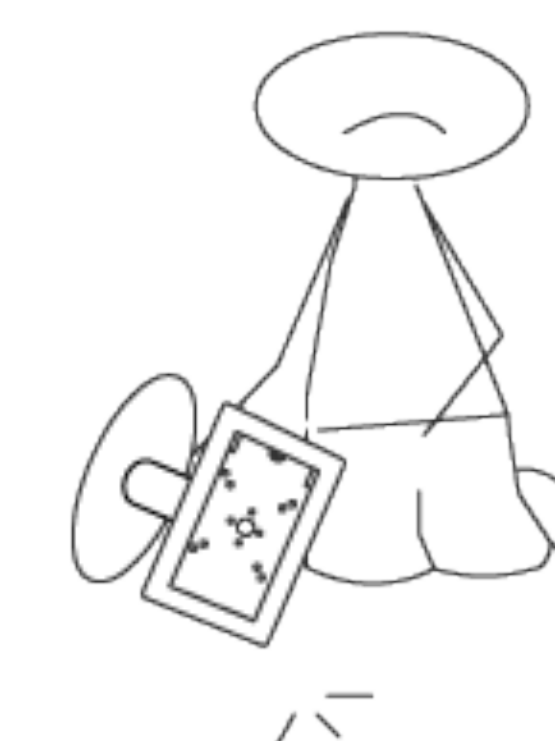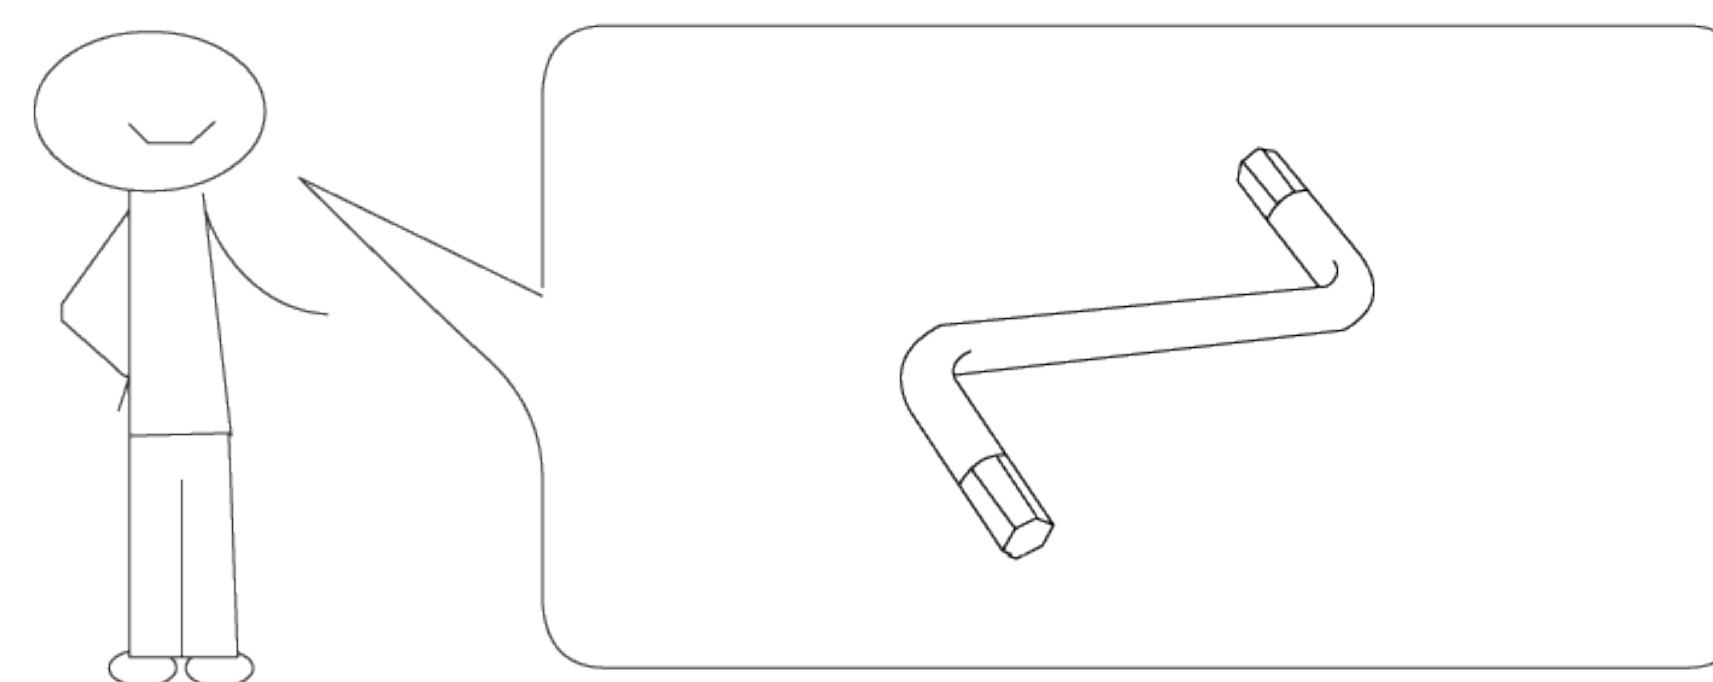


Note: Use a soft underlayment during assembly to avoid damage

Explanation

1

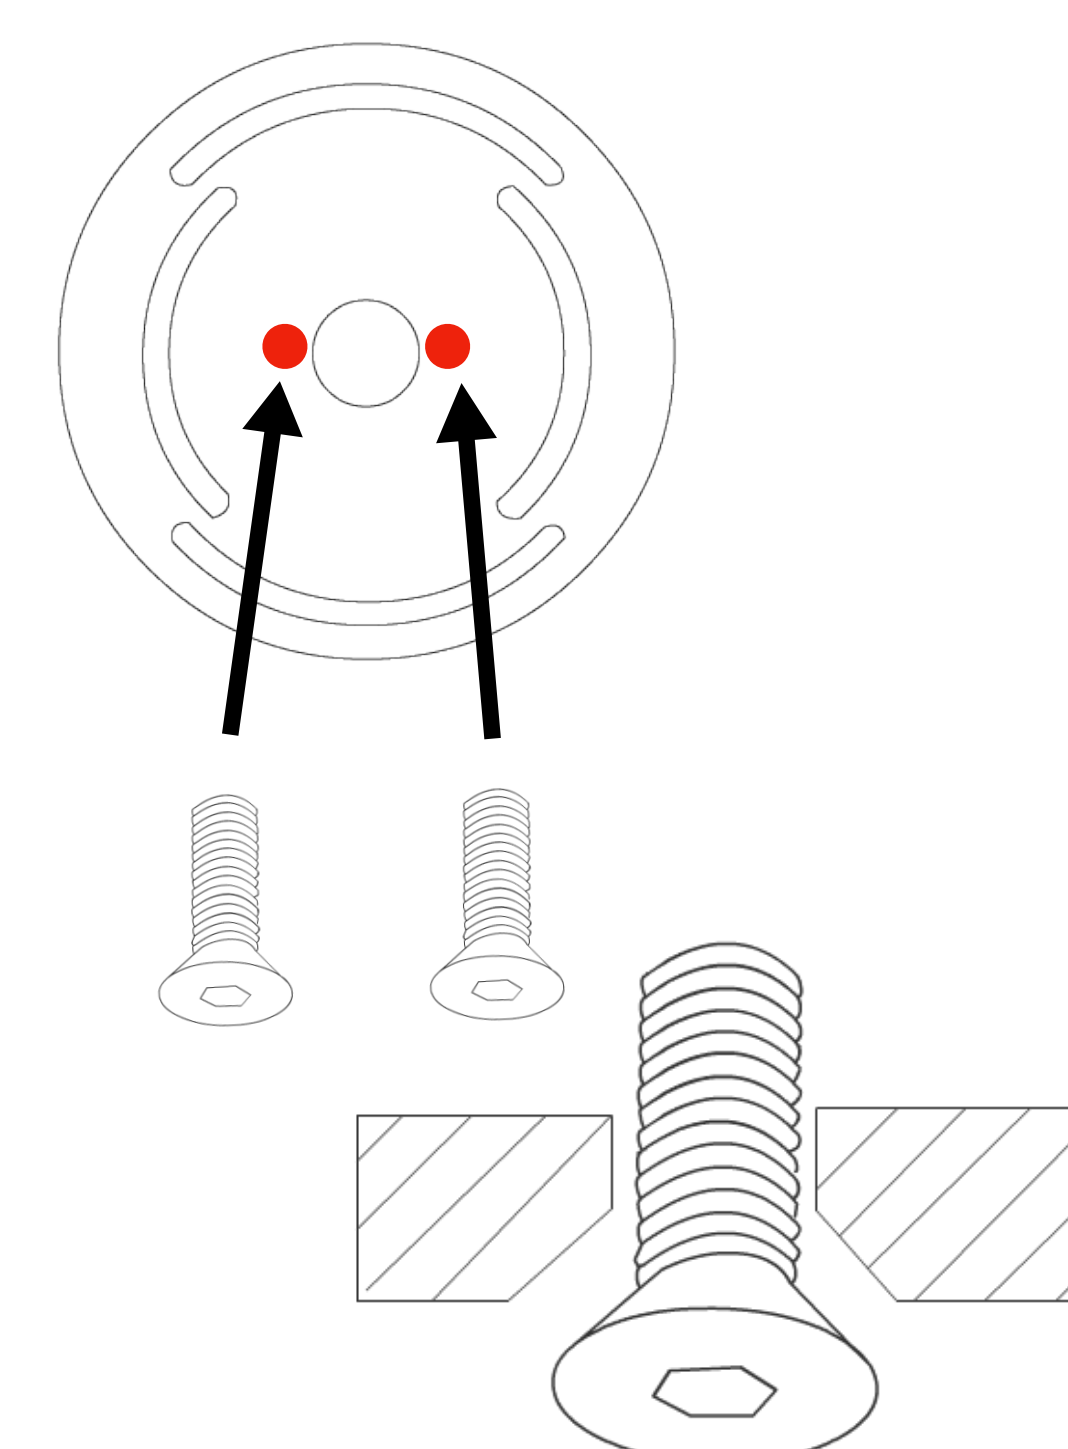
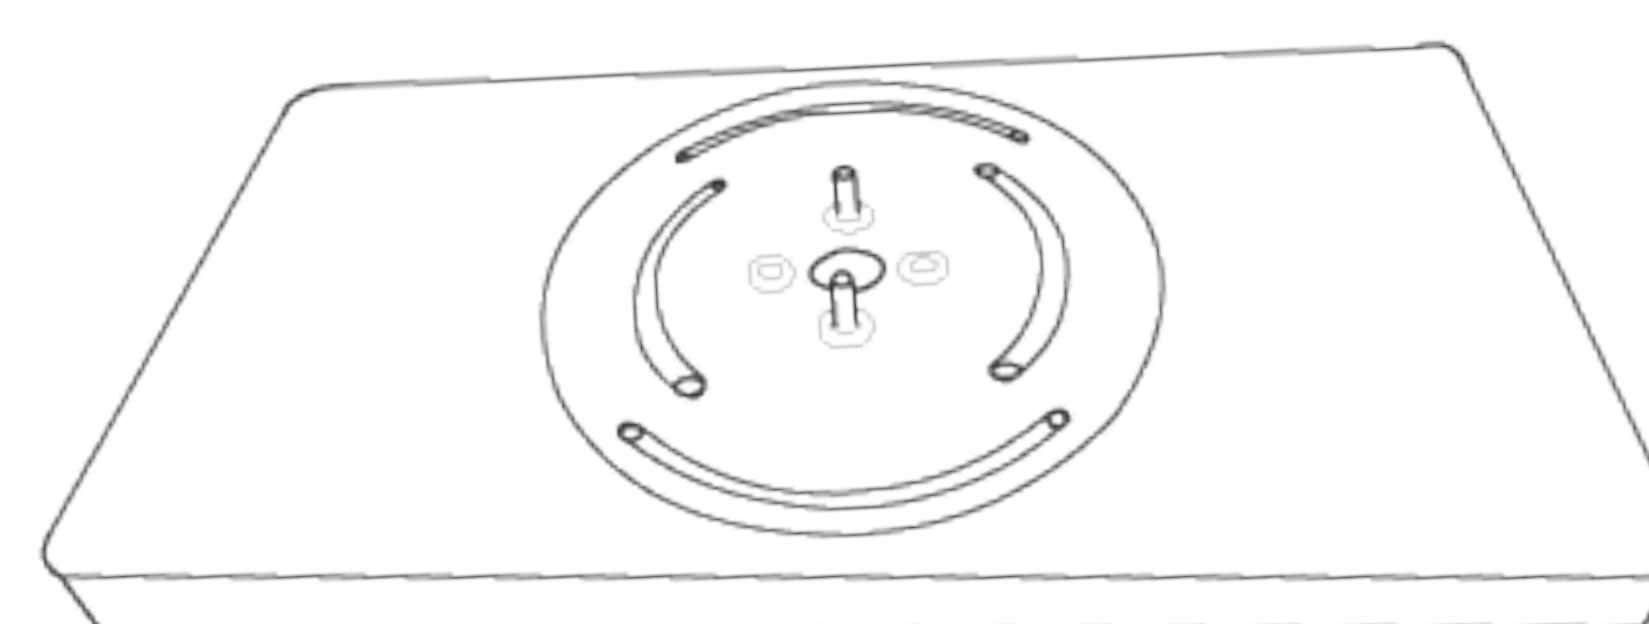


2

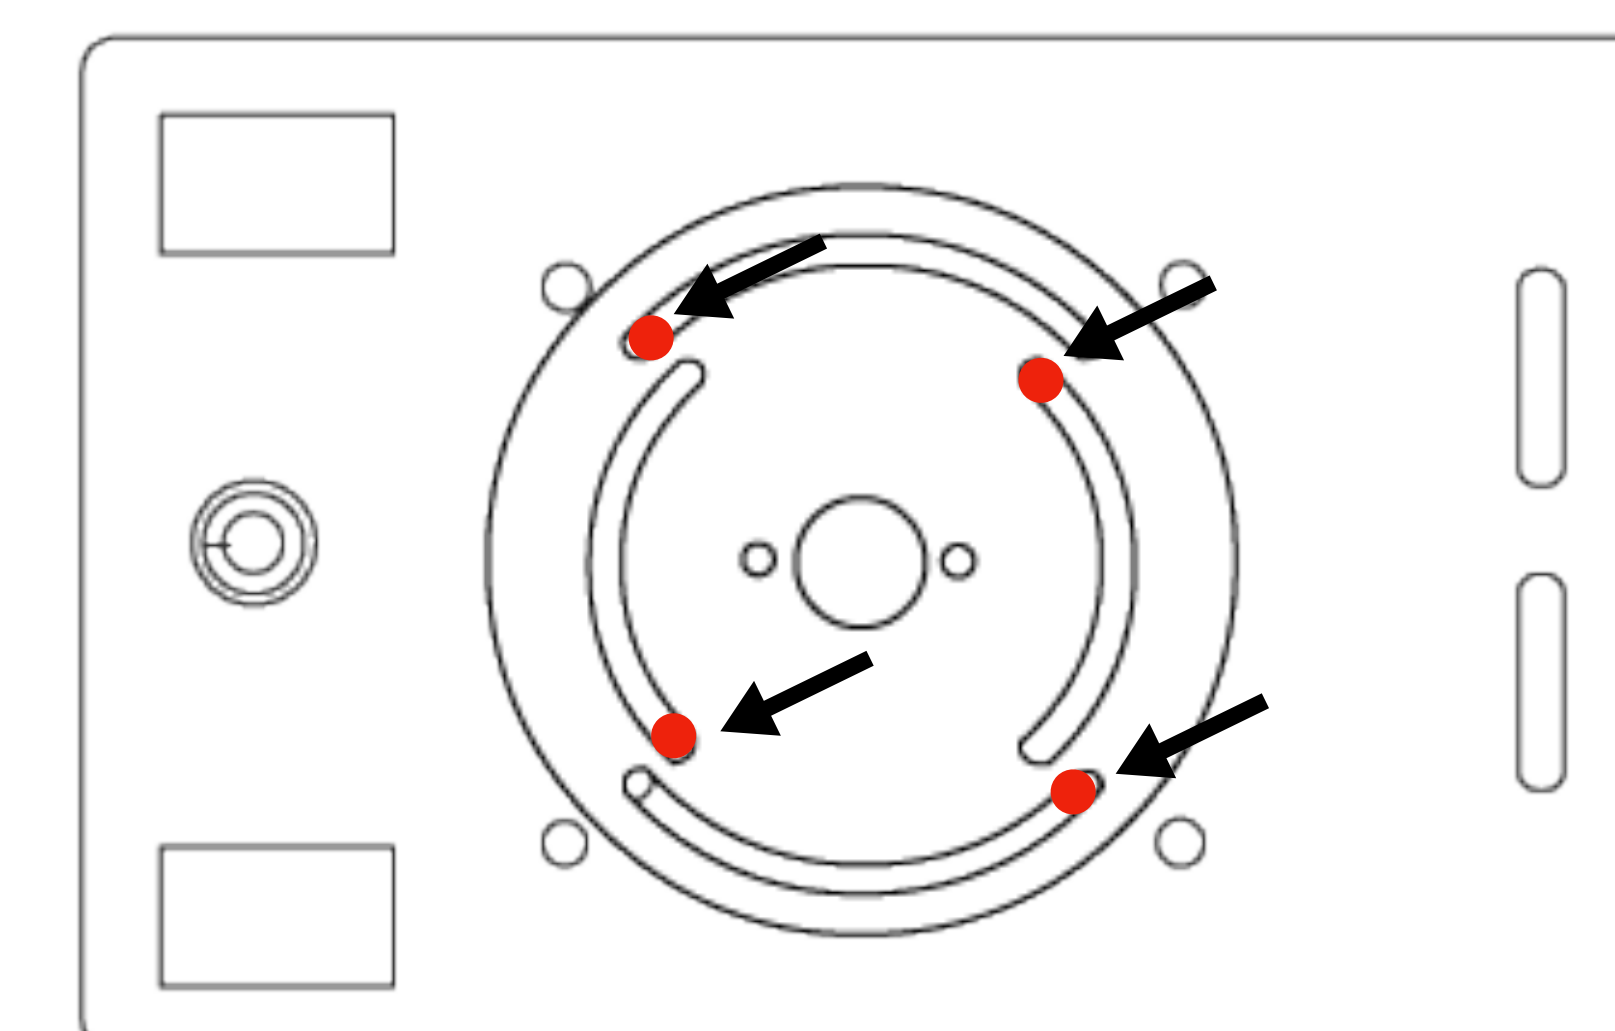

From Inside the casing

3

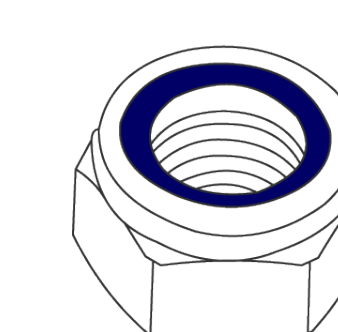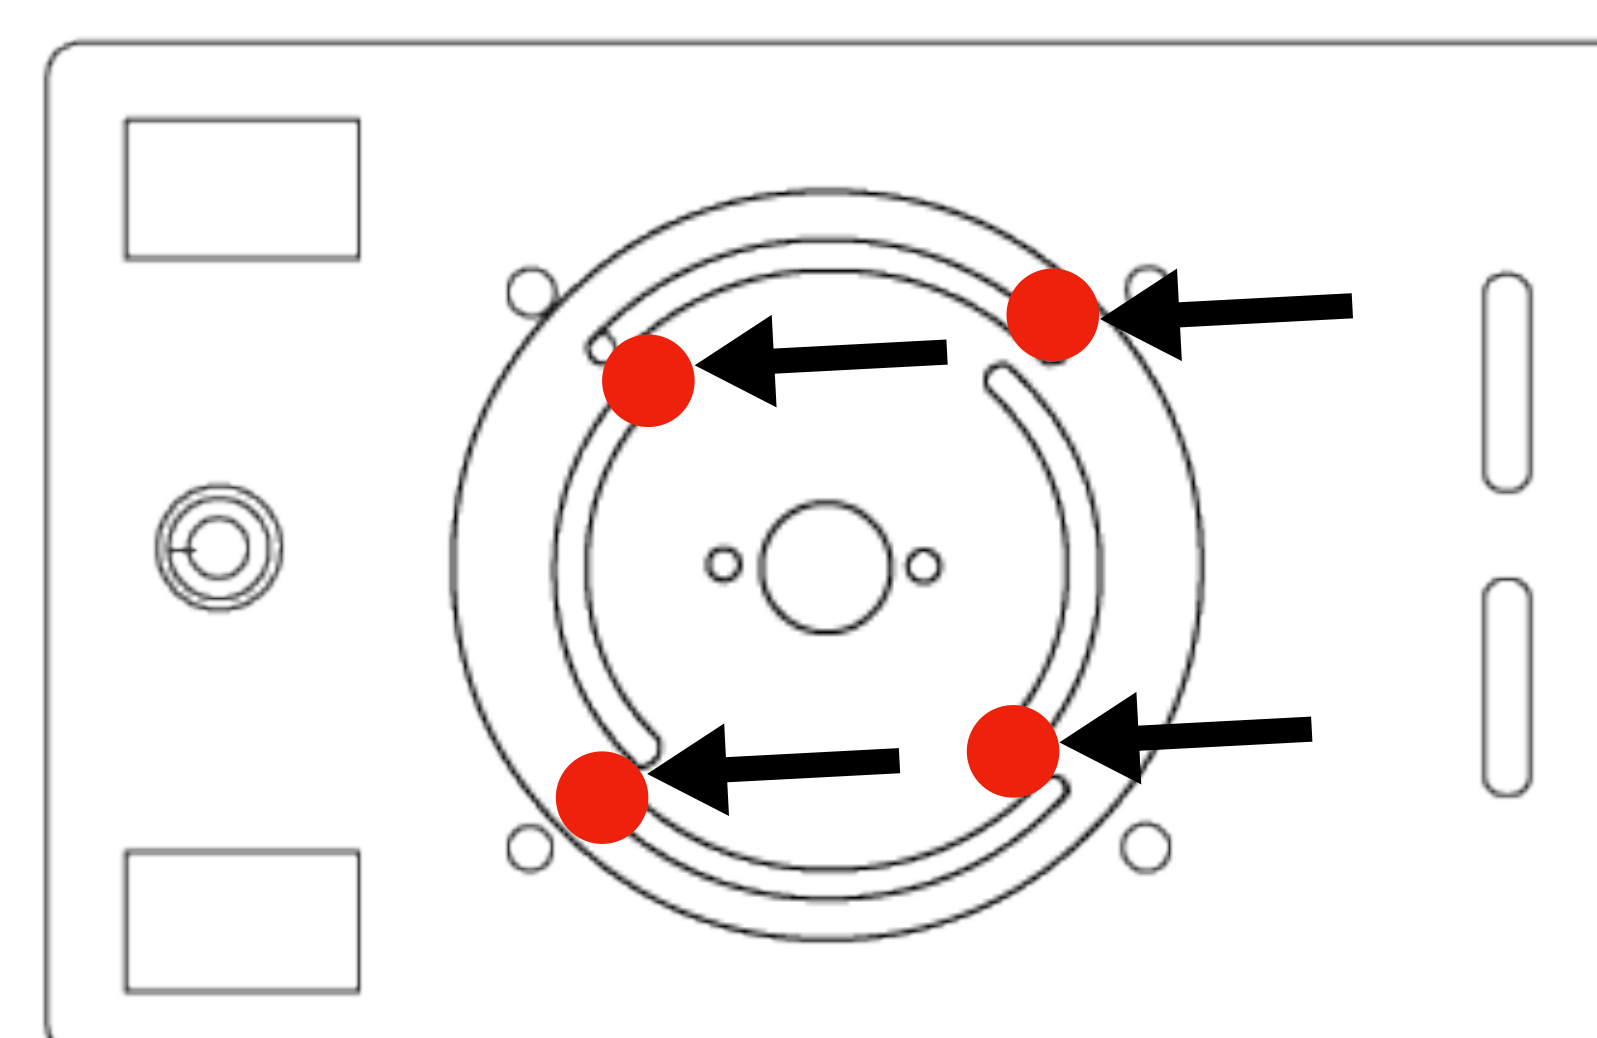

Outside the casing; on turn disc

4

