


SECURO FIXING THE RUBBERS FOR 9"-11" & 12"-13" ENCLOSURES

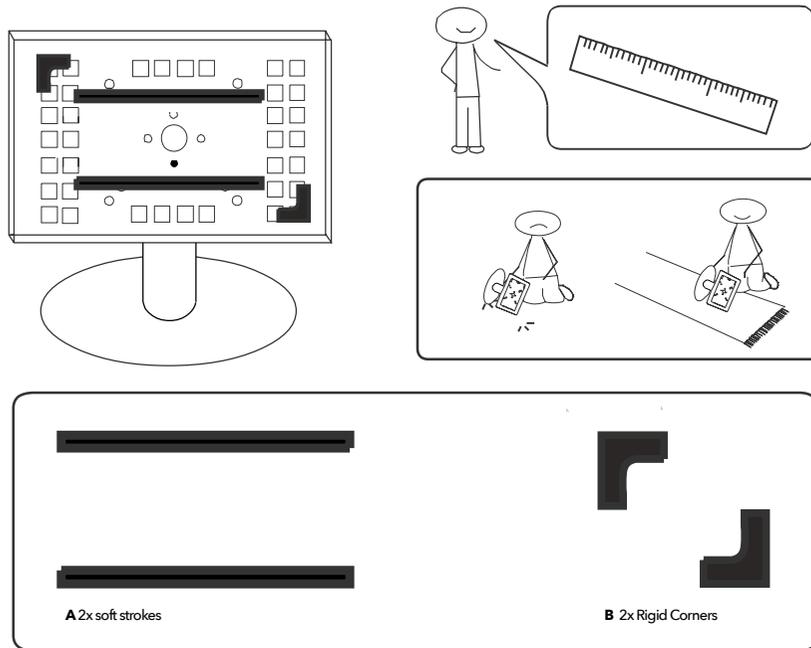

- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 2 self adhesive soft strokes **[A]** in the length of the enclosure.
- 3 Place tablet on top of the strokes and position in the center, use a ruler or the square holes pattern to align.
- 4 Place front part of the enclosure upside down onto the rear part and check if the home button and camera are in the right position. Adjust accordingly
- 5 Remove the protective film and loosely place the rigid corners **[B]** on opposite sides of the tablet, do not press firmly yet.
- 6 Place the front part as directed and assure the position of the rubber and tablet is correct.
- 7 Alter the corner 's position or press them firmly to fixate.

