

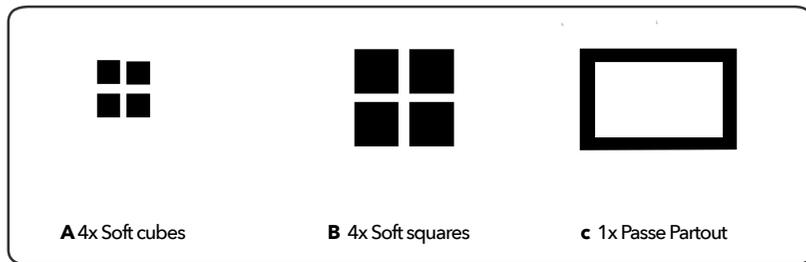




SECURO FIXING THE RUBBERS FOR 7"-8" ENCLOSURES

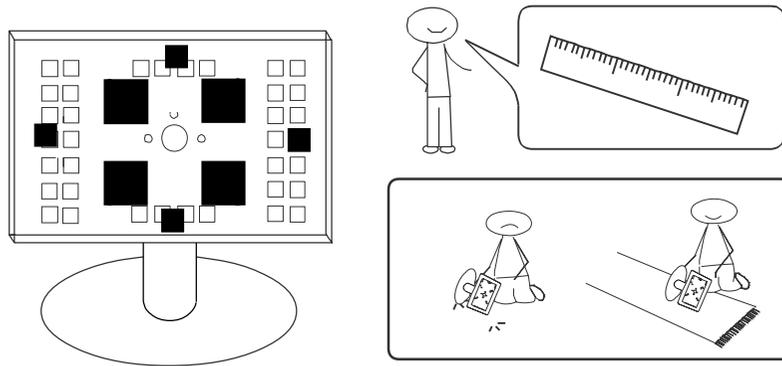


- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 4 self adhesive soft squares in the corners, just within the square hole pattern of the enclosure.
- 3 Place tablet on top of the squares and position in the center, use a ruler or the square holes pattern to align.
- 4 Place the front part of the enclosure upside down under and check the position noting home button and camera.
- Optional:** If you have a tablet that is smaller than the opening in the front part of the enclosure, position the Passe Partout evenly aligned on top of your tablet
- 5 Place the cubes on each side of the tablet, do not press firmly yet.
- 6 Place front part in the correct way and check if the position is correct.
- 7 Alter the cubes' position and/or press them firmly to fixate.

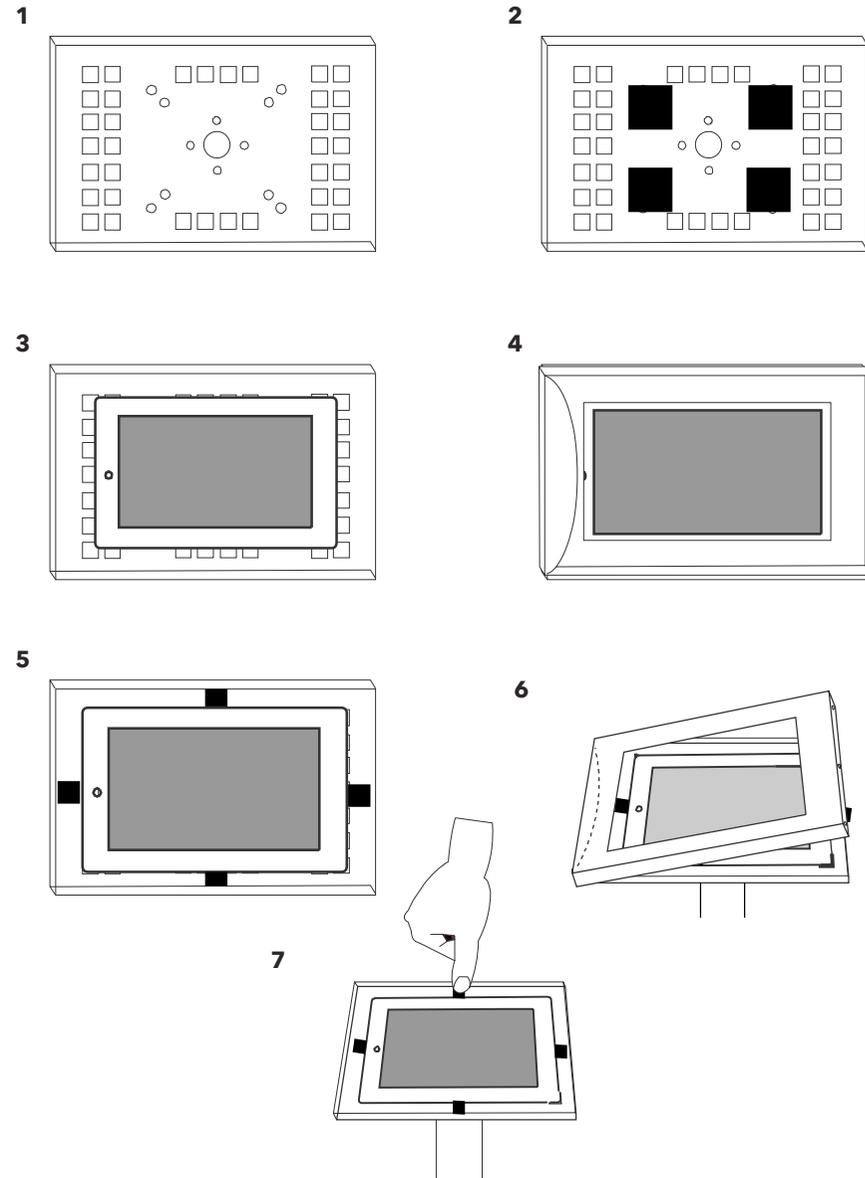



SECURO FIXING THE RUBBERS FOR 7"-8" ENCLOSURES

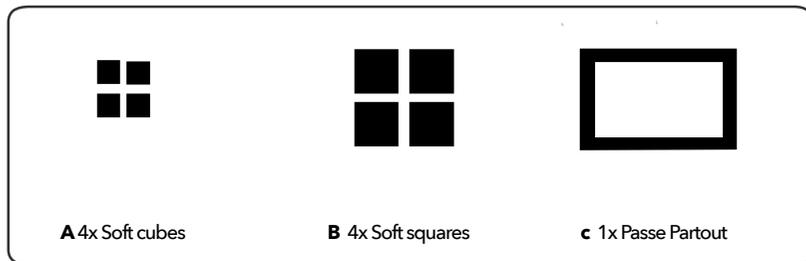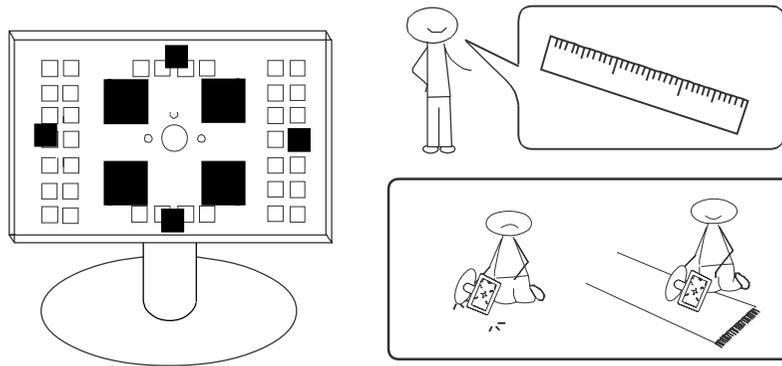


- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 4 self adhesive soft squares in the corners, just within the square hole pattern of the enclosure.
- 3 Place tablet on top of the squares and position in the center, use a ruler or the square holes pattern to align.
- 4 Place the front part of the enclosure upside down under and check the position noting home button and camera.
- Optional:** If you have a tablet that is smaller than the opening in the front part of the enclosure, position the Passe Partout evenly aligned on top of your tablet
- 5 Place the cubes on each side of the tablet, do not press firmly yet.
- 6 Place front part in the correct way and check if the position is correct.
- 7 Alter the cubes' position and/or press them firmly to fixate.

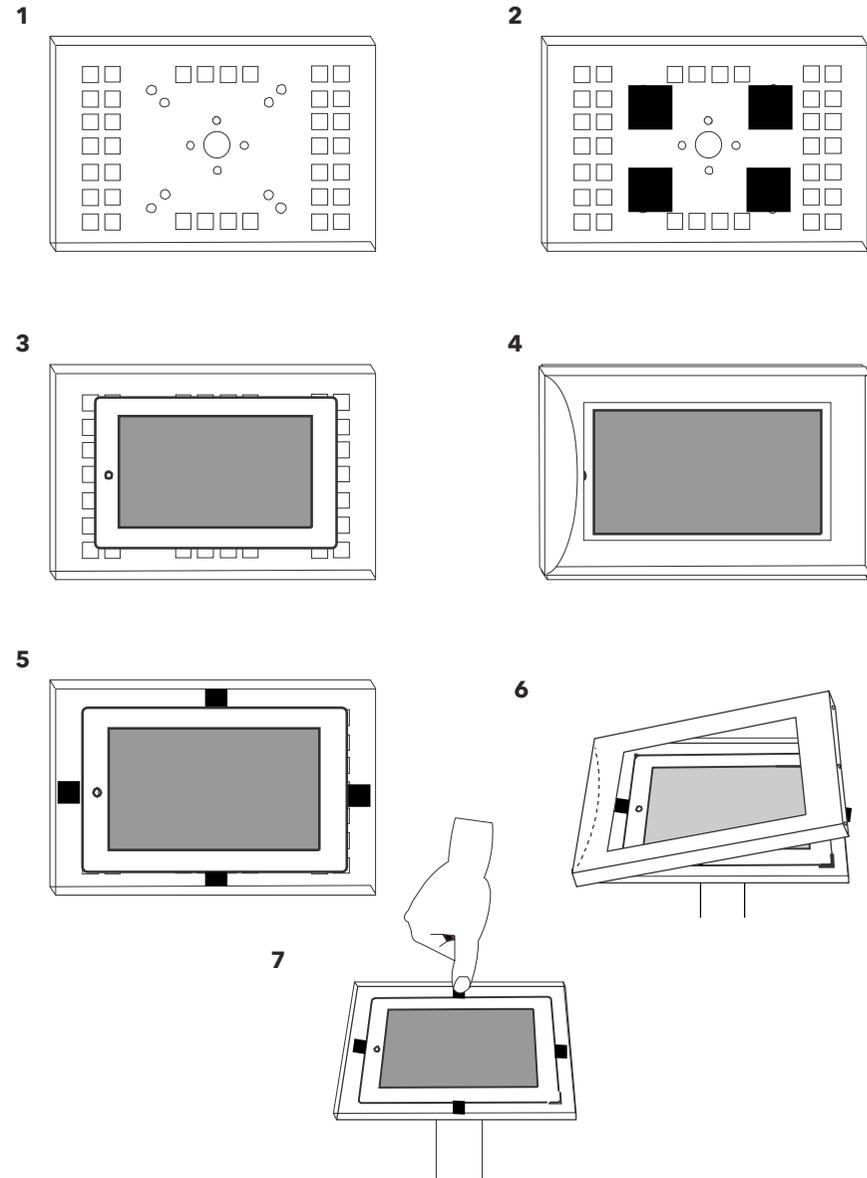



SECURO FIXING THE RUBBERS FOR 7"-8" ENCLOSURES

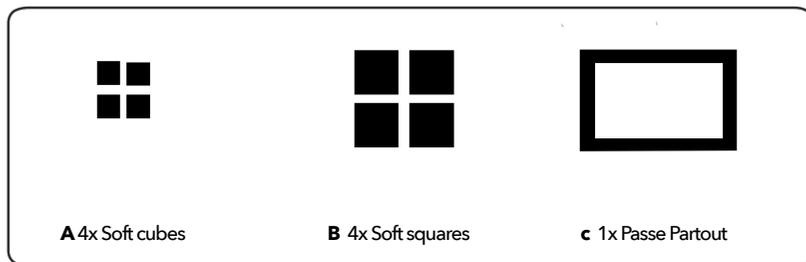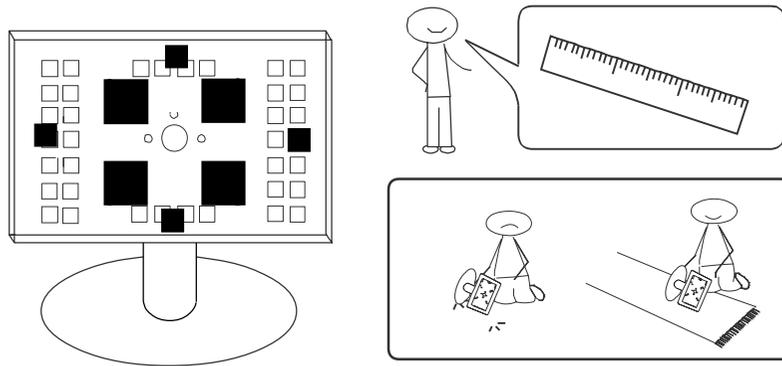

- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 4 self adhesive soft squares in the corners, just within the square hole pattern of the enclosure.
- 3 Place tablet on top of the squares and position in the center, use a ruler or the square holes pattern to align.
- 4 Place the front part of the enclosure upside down under and check the position noting home button and camera.
- Optional:** If you have a tablet that is smaller than the opening in the front part of the enclosure, position the Passe Partout evenly aligned on top of your tablet
- 5 Place the cubes on each side of the tablet, do not press firmly yet.
- 6 Place front part in the correct way and check if the position is correct.
- 7 Alter the cubes' position and/or press them firmly to fixate.

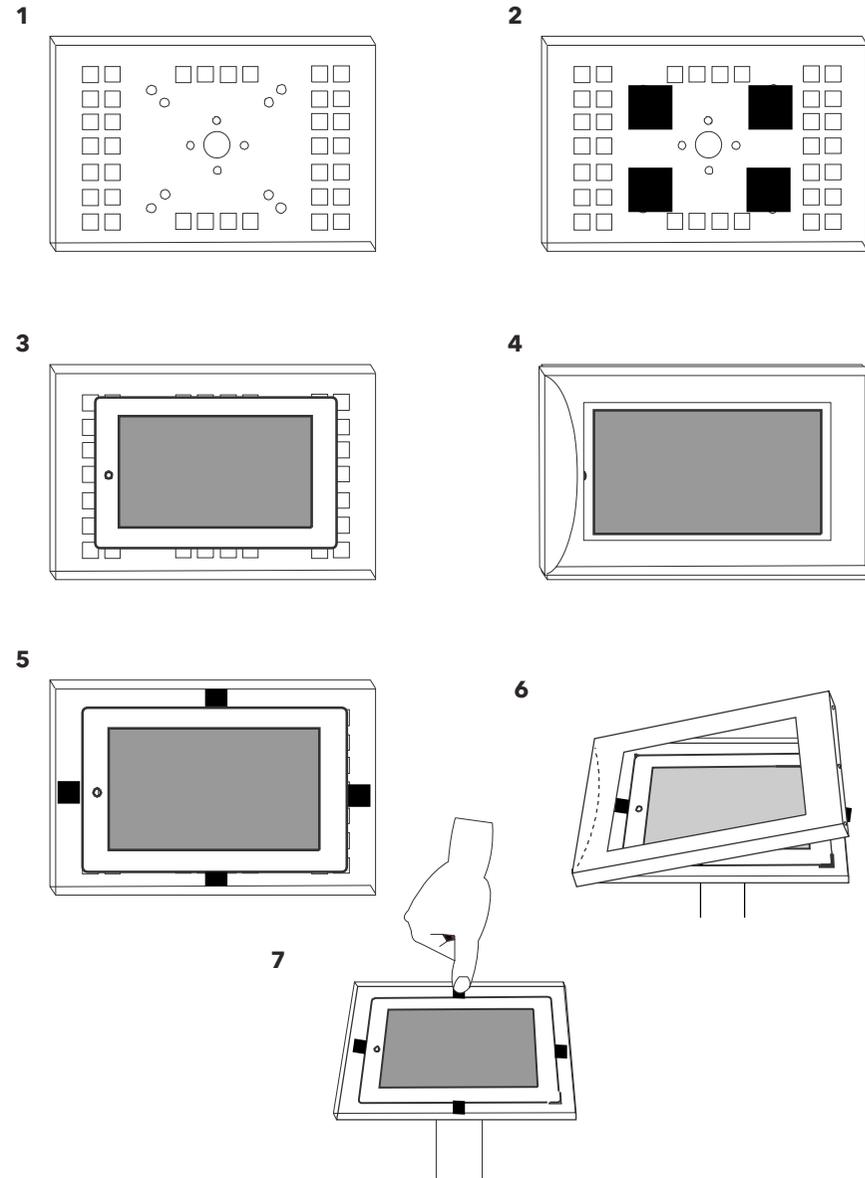

SECURO FIXING THE RUBBERS FOR 7"-8" ENCLOSURES

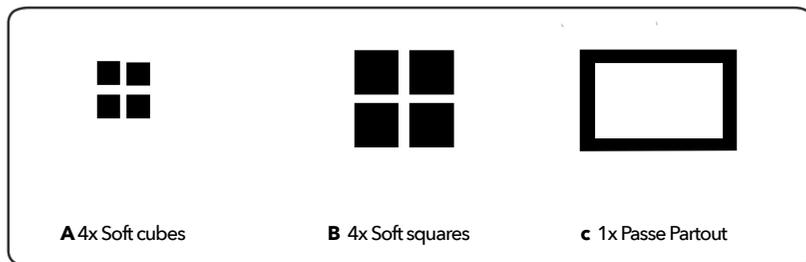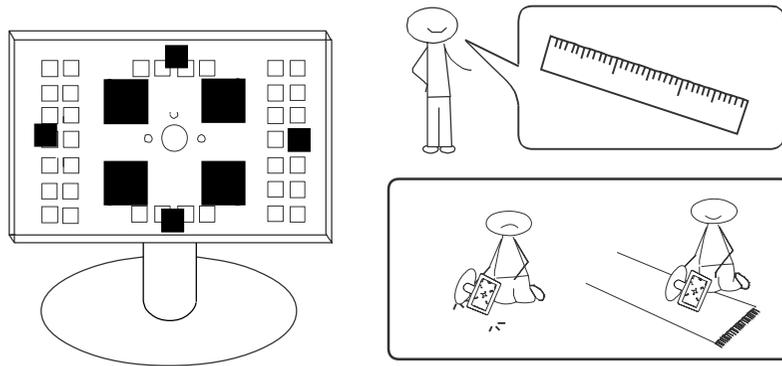

- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 4 self adhesive soft squares in the corners, just within the square hole pattern of the enclosure.
- 3 Place tablet on top of the squares and position in the center, use a ruler or the square holes pattern to align.
- 4 Place the front part of the enclosure upside down under and check the position noting home button and camera.
- Optional:** If you have a tablet that is smaller than the opening in the front part of the enclosure, position the Passe Partout evenly aligned on top of your tablet
- 5 Place the cubes on each side of the tablet, do not press firmly yet.
- 6 Place front part in the correct way and check if the position is correct.
- 7 Alter the cubes' position and/or press them firmly to fixate.

