


SECURO | FIXING THE RUBBER PADS

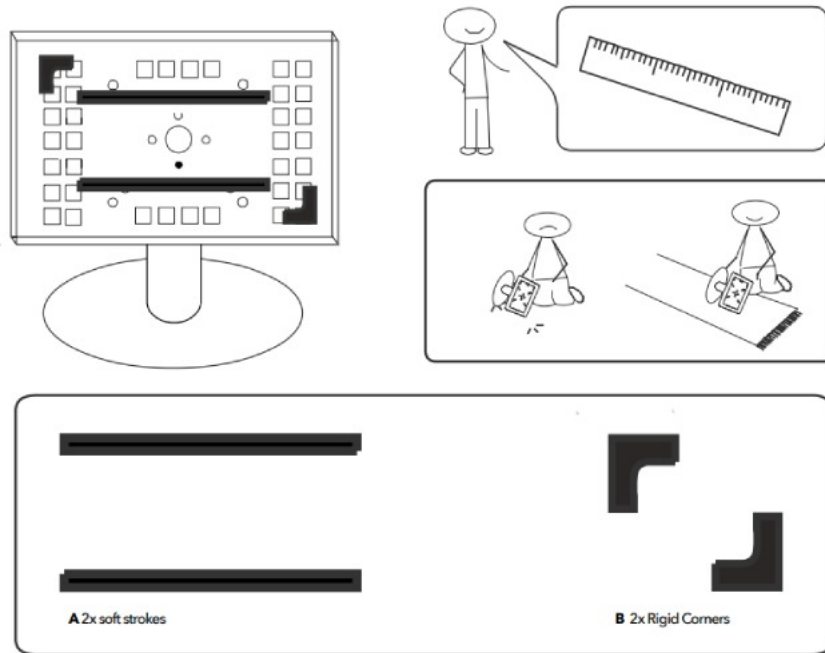

- 1 Take the rear part of the enclosure
- 2 Remove the protective film and position the 2 self adhesive soft strokes [A] in the length of the enclosure.
- 3 Place tablet on top of the strokes and position in the center, use a ruler or the square holes pattern to align.
- 4 Place front part of the enclosure upside down onto the rear part and check if the home button and camera are in the right position. Adjust accordingly.
- 5 Remove the protective film and loosely place the rigid corners [B] on opposite sides of the tablet, do not press firmly yet.
- 6 Place the front part as directed and assure the position of the rubber and tablet is correct.
- 7 Alter the corner's position or press them firmly to fixate.

Please note: only 2 rubber pads are usually needed for the corners. 1 additional rubber pad is included (3 in total) to provide extra stability when needed.

