


Tilt Module

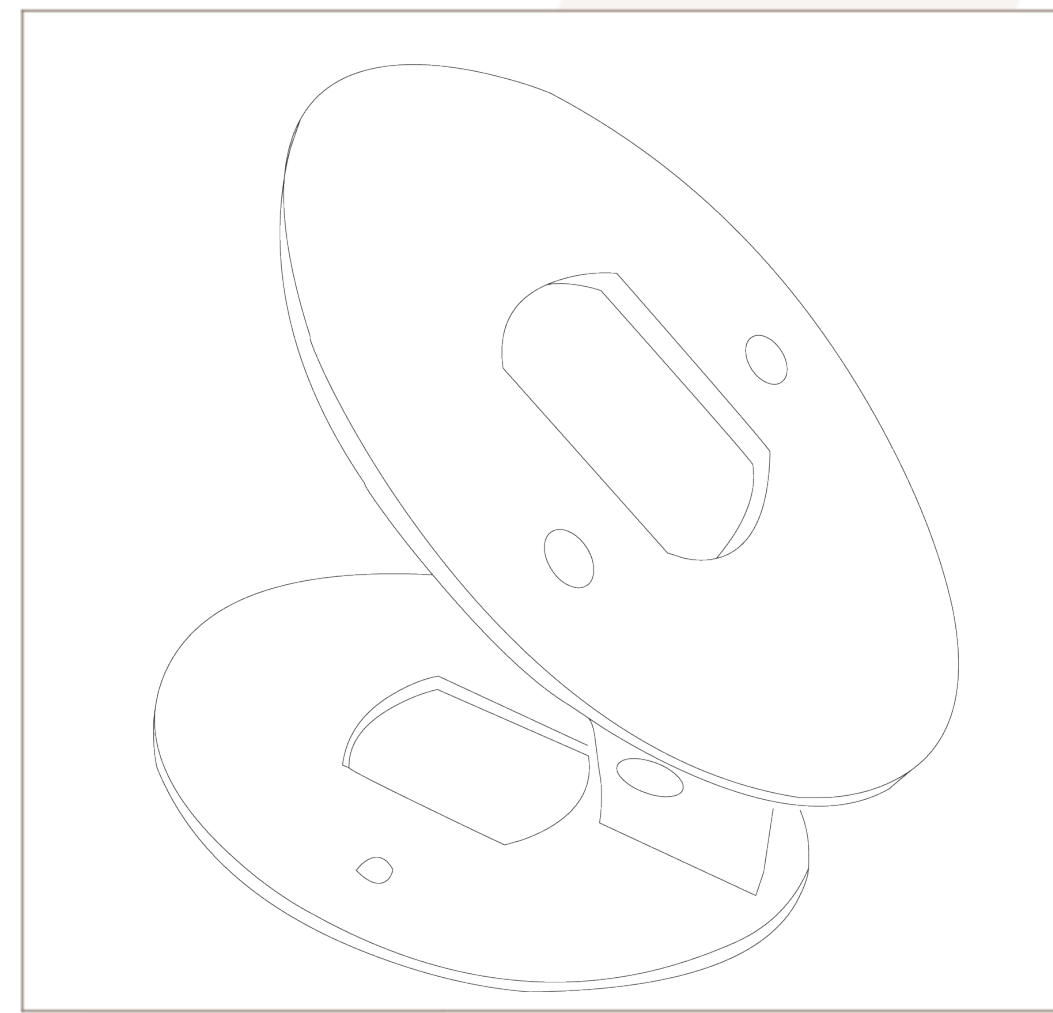

1

Place the tube in an upward position.
Examine the round holes in the tilt unit and make sure the ones **with** thread are on top.

2

Mount the side with the **non-threaded** holes on the diagonal side of the tube. The hinge side should be on the high side of the tube.


3

Mount the casing on the top part of the tilt module. (with the treaded holes)


4

Consult the manual of your casing for further fitting instructions


Content

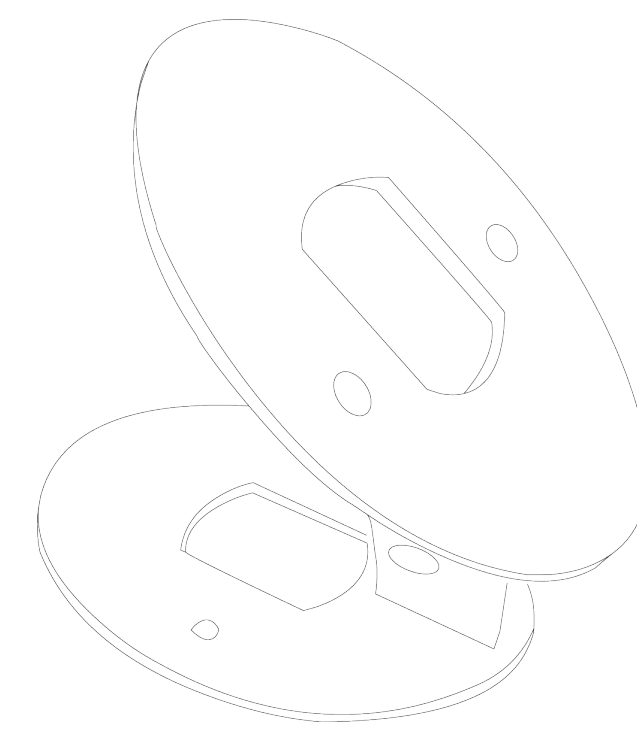

Tilt module



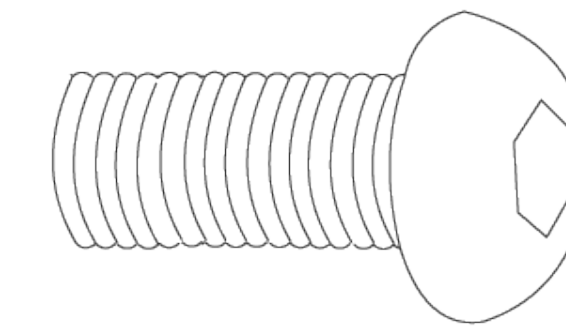


2x M6 x 10

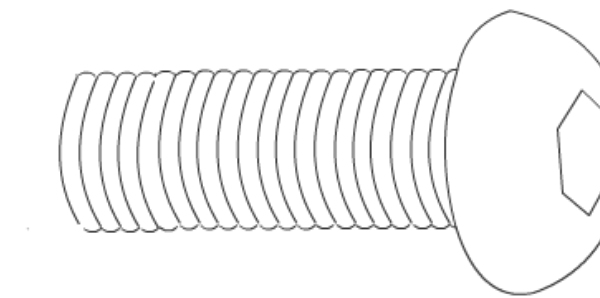

2x M6 x 16



Necessities

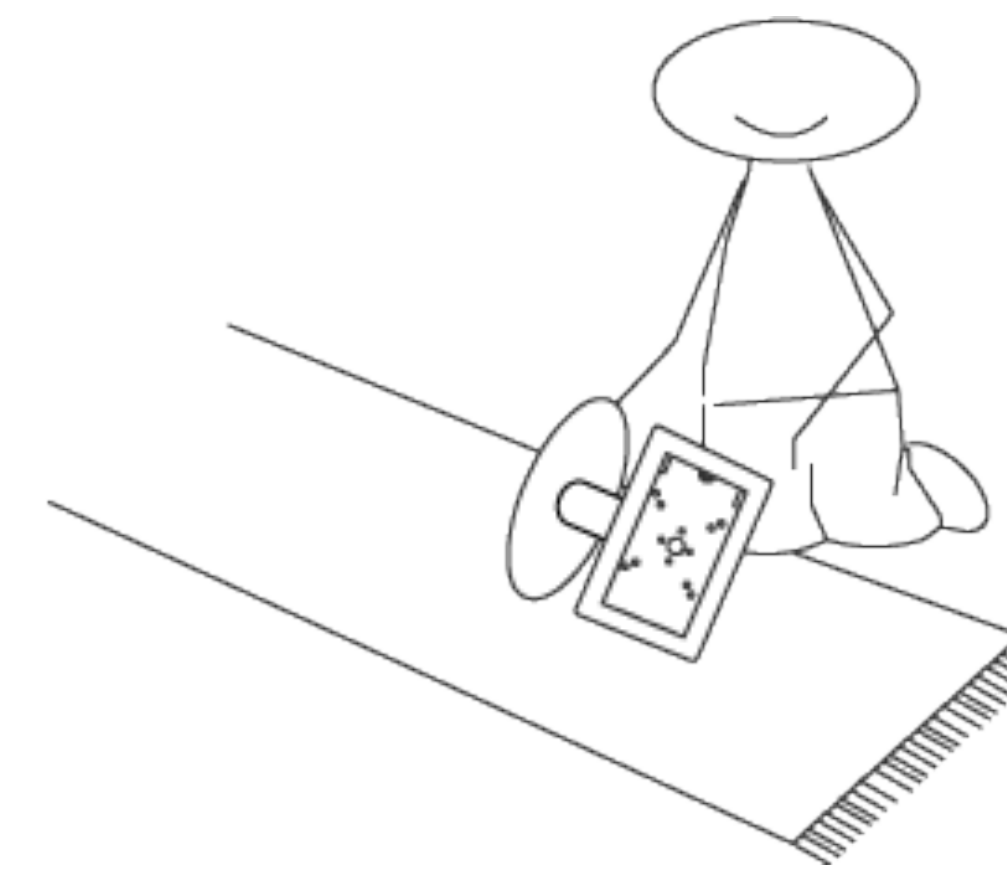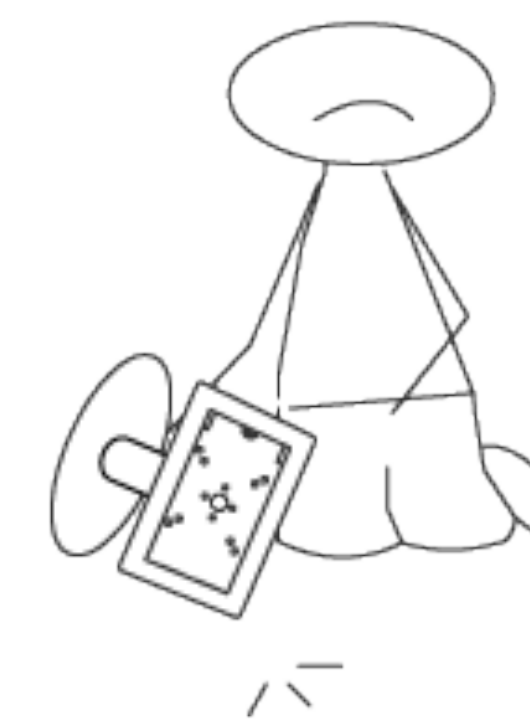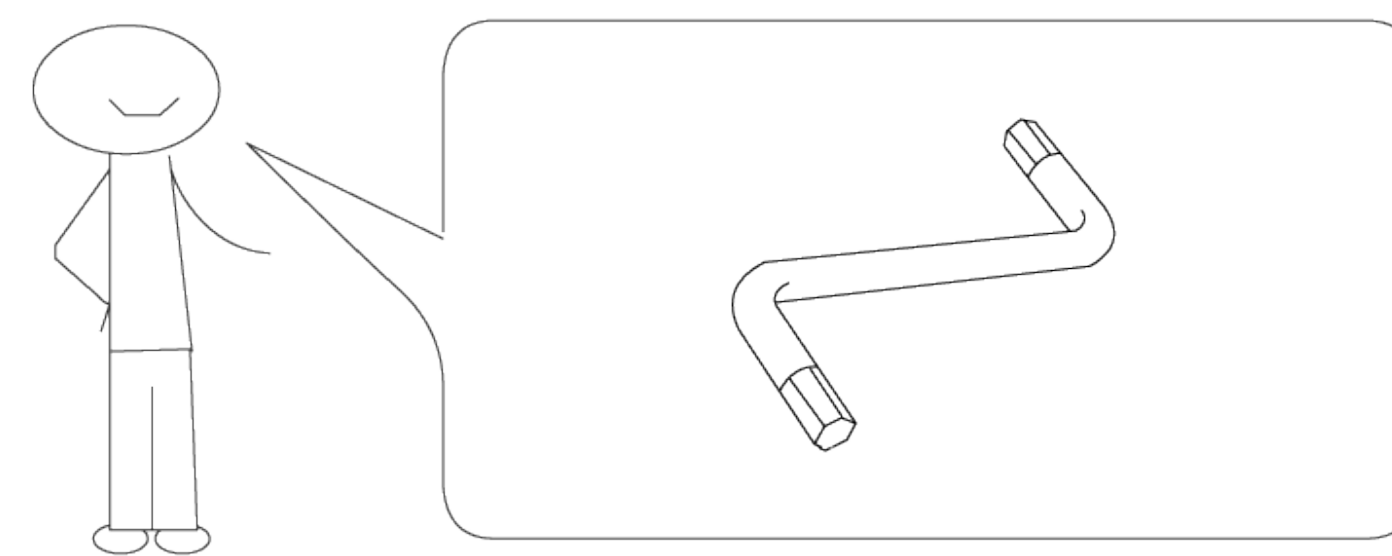


NOTE: Use a soft underlayment during assembly to avoid damage

Explanation


1

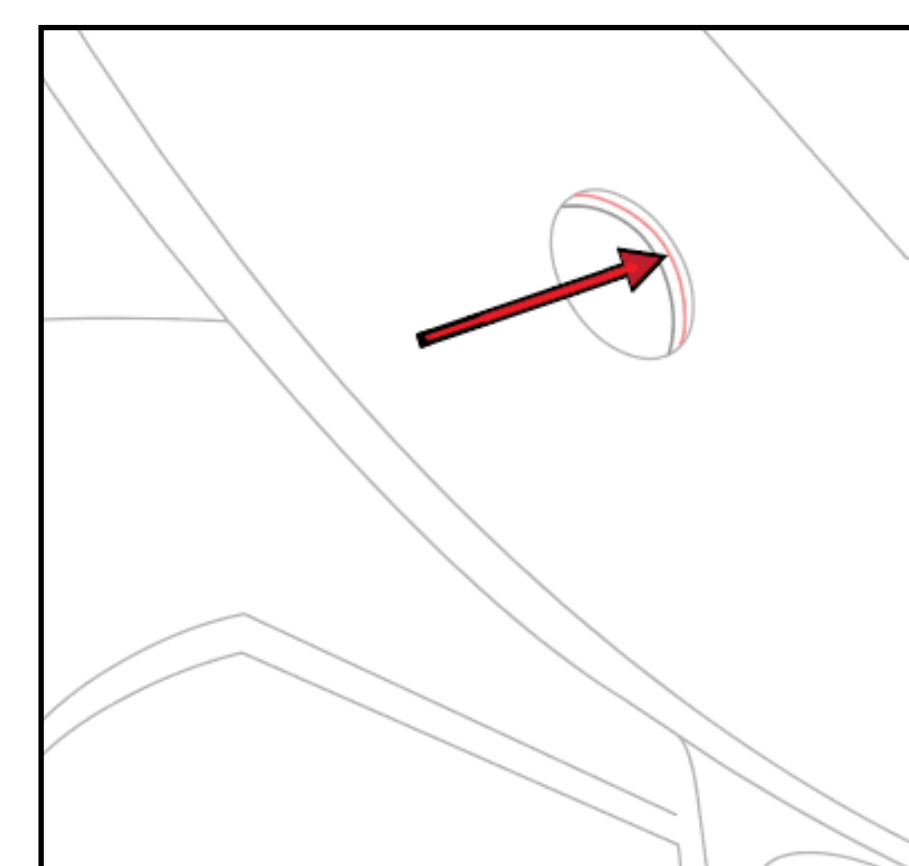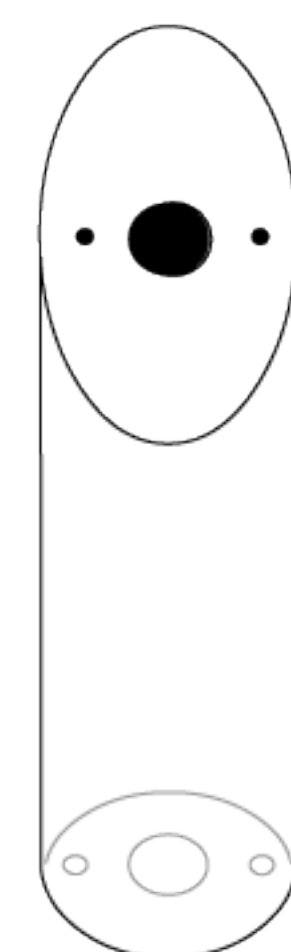

2

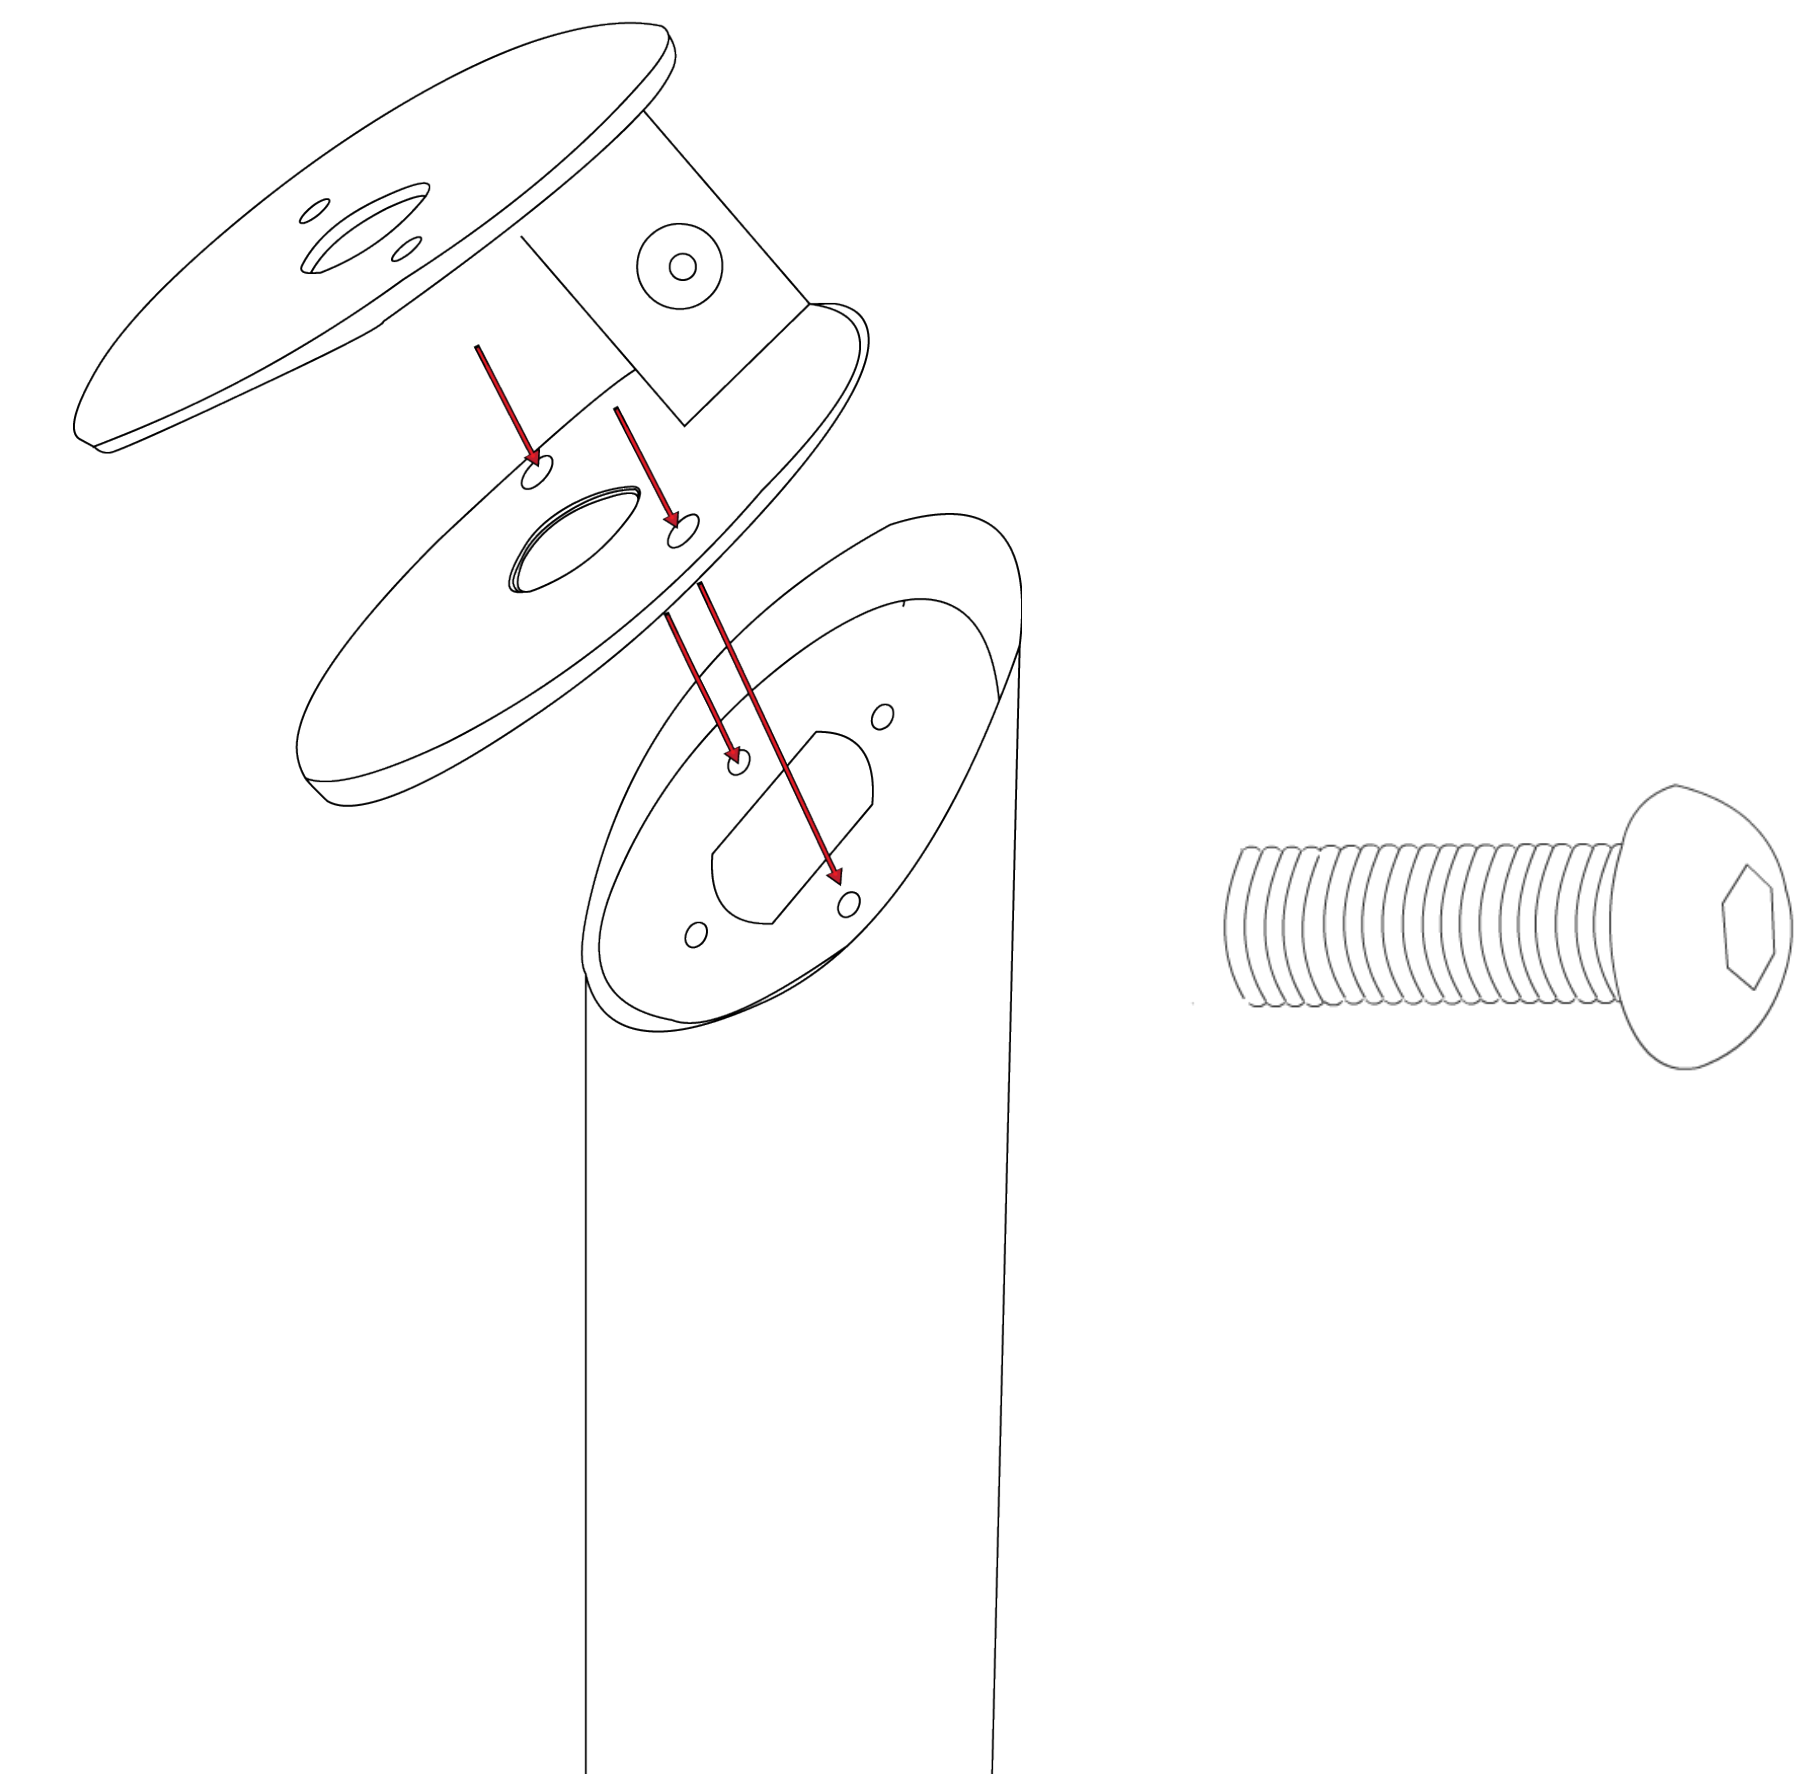

3

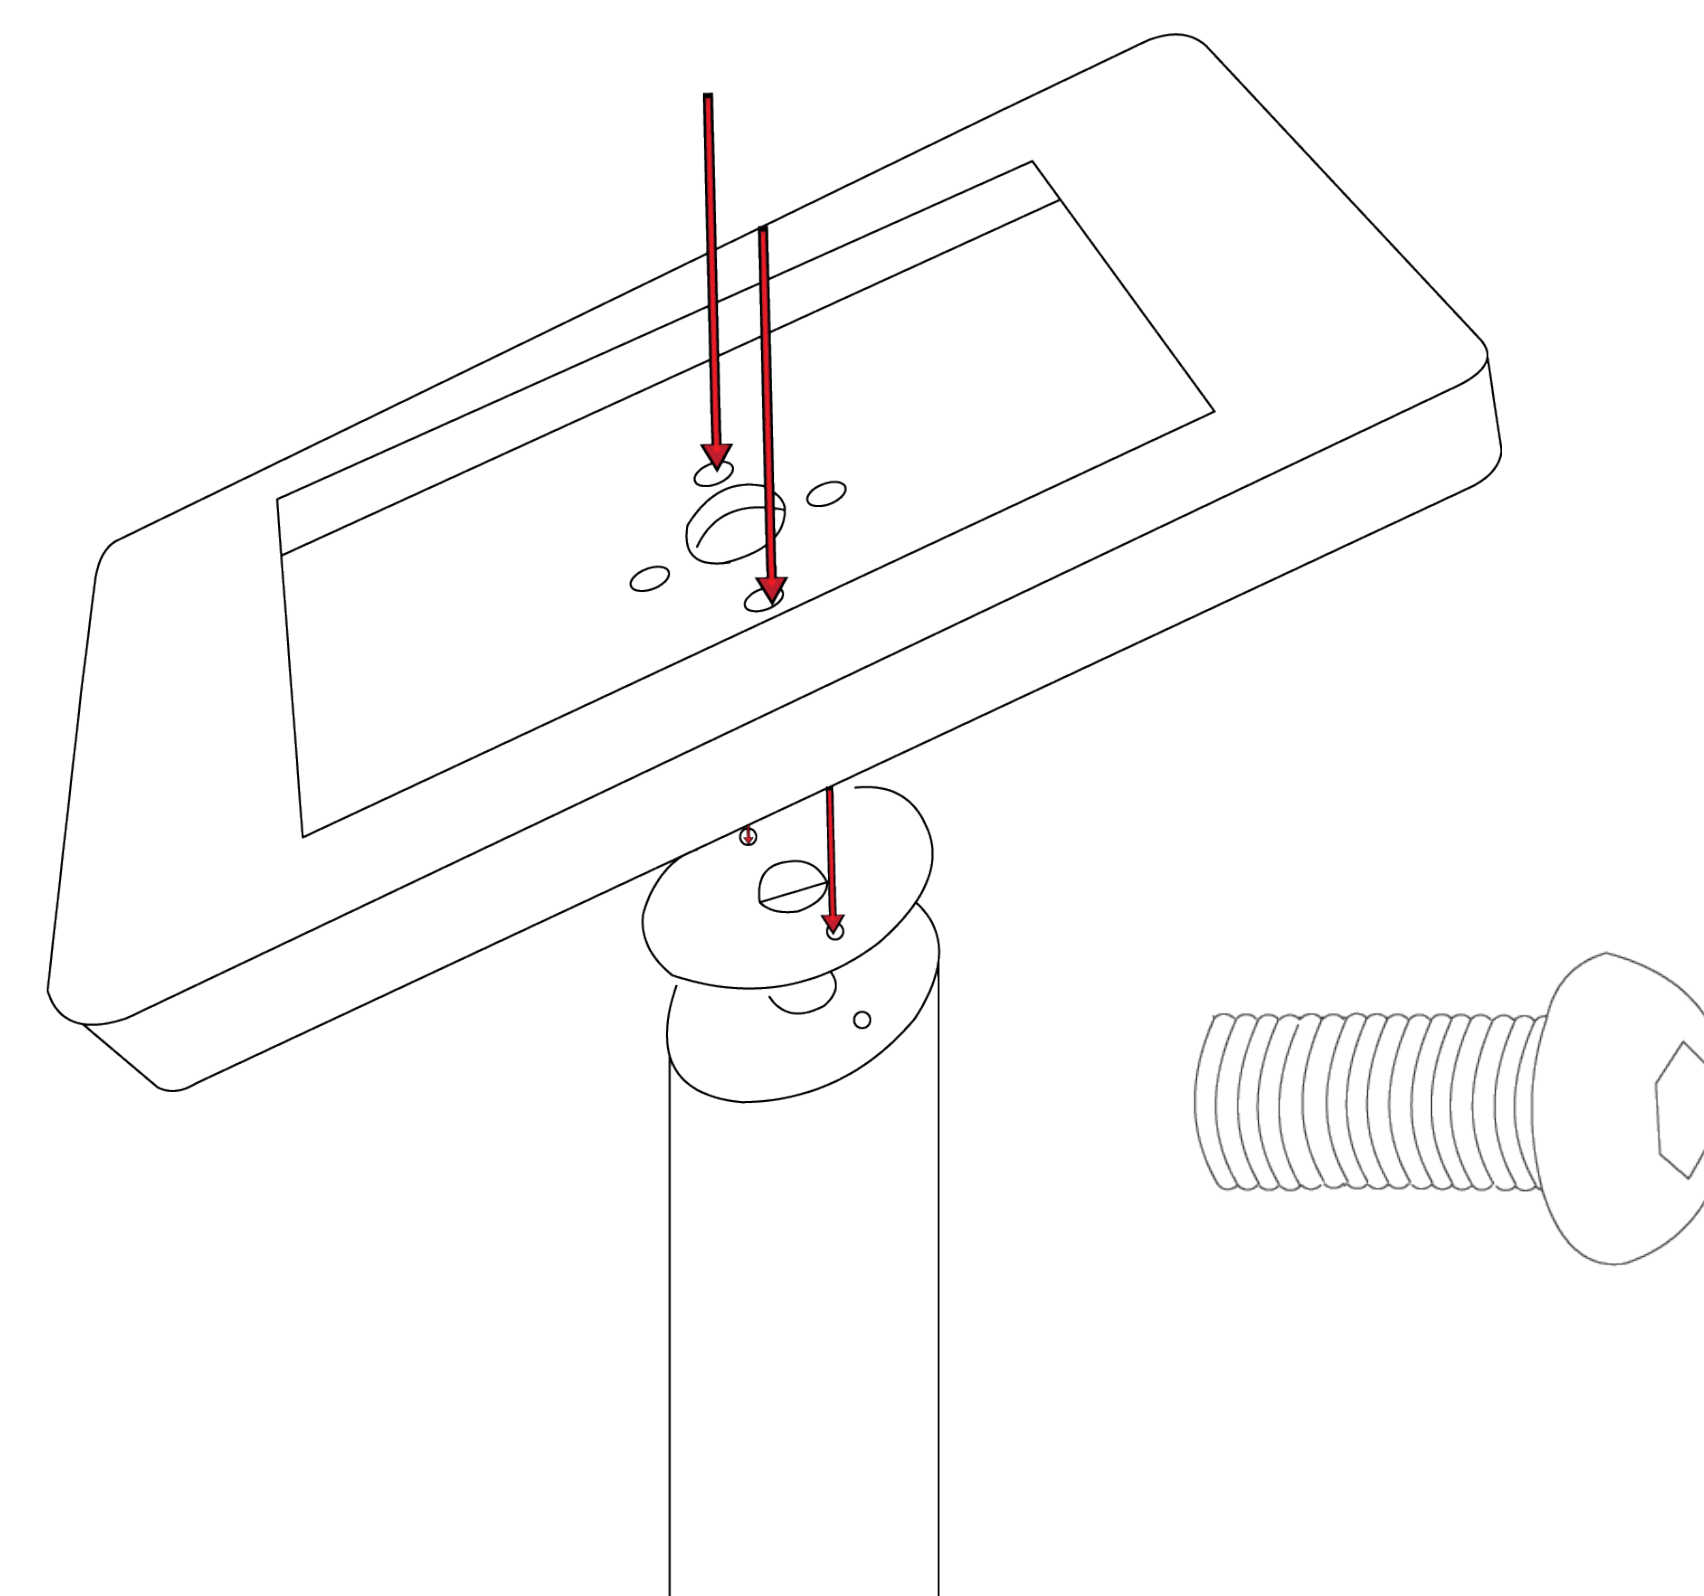

4

