


# Floor stand

Nuvola

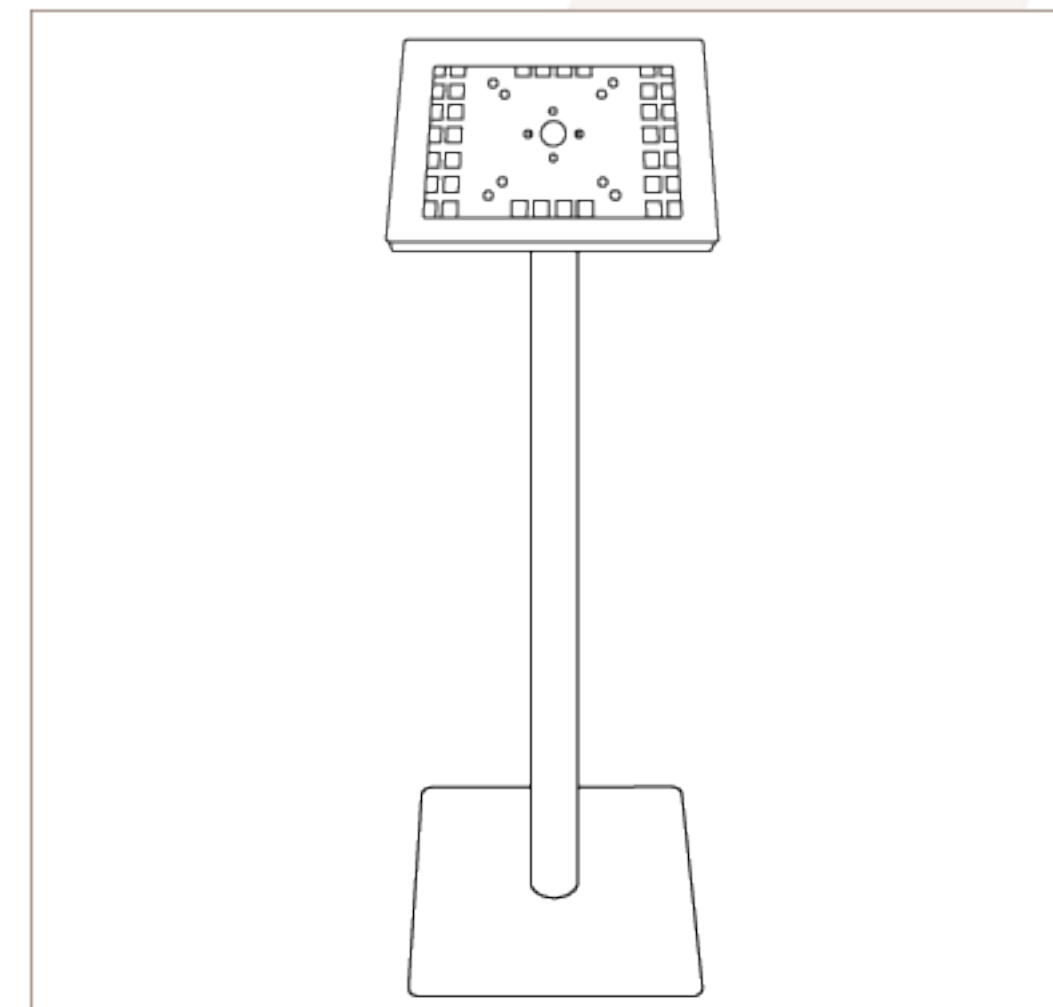

1

When not placed yet: Place floor rubbers underneath the foot plate.

2

Fit foot plate on flat side tube; Use M6 x 16.

3

Fit the rear of the casing on upper or lower holes in the tilt unit; Use M6 x 16.

4

Optional: Guide power cable through hole in casing and tube to bottom.

5

Place tablet and fit front part of the casing over the rear part. Press tablet onto cell rubbers.


6

Position tablet into casing without reducing the pressure on the tablet


7

Close the casing with screws; Use M6 x 10. And/or close with an additional key lock



## Content

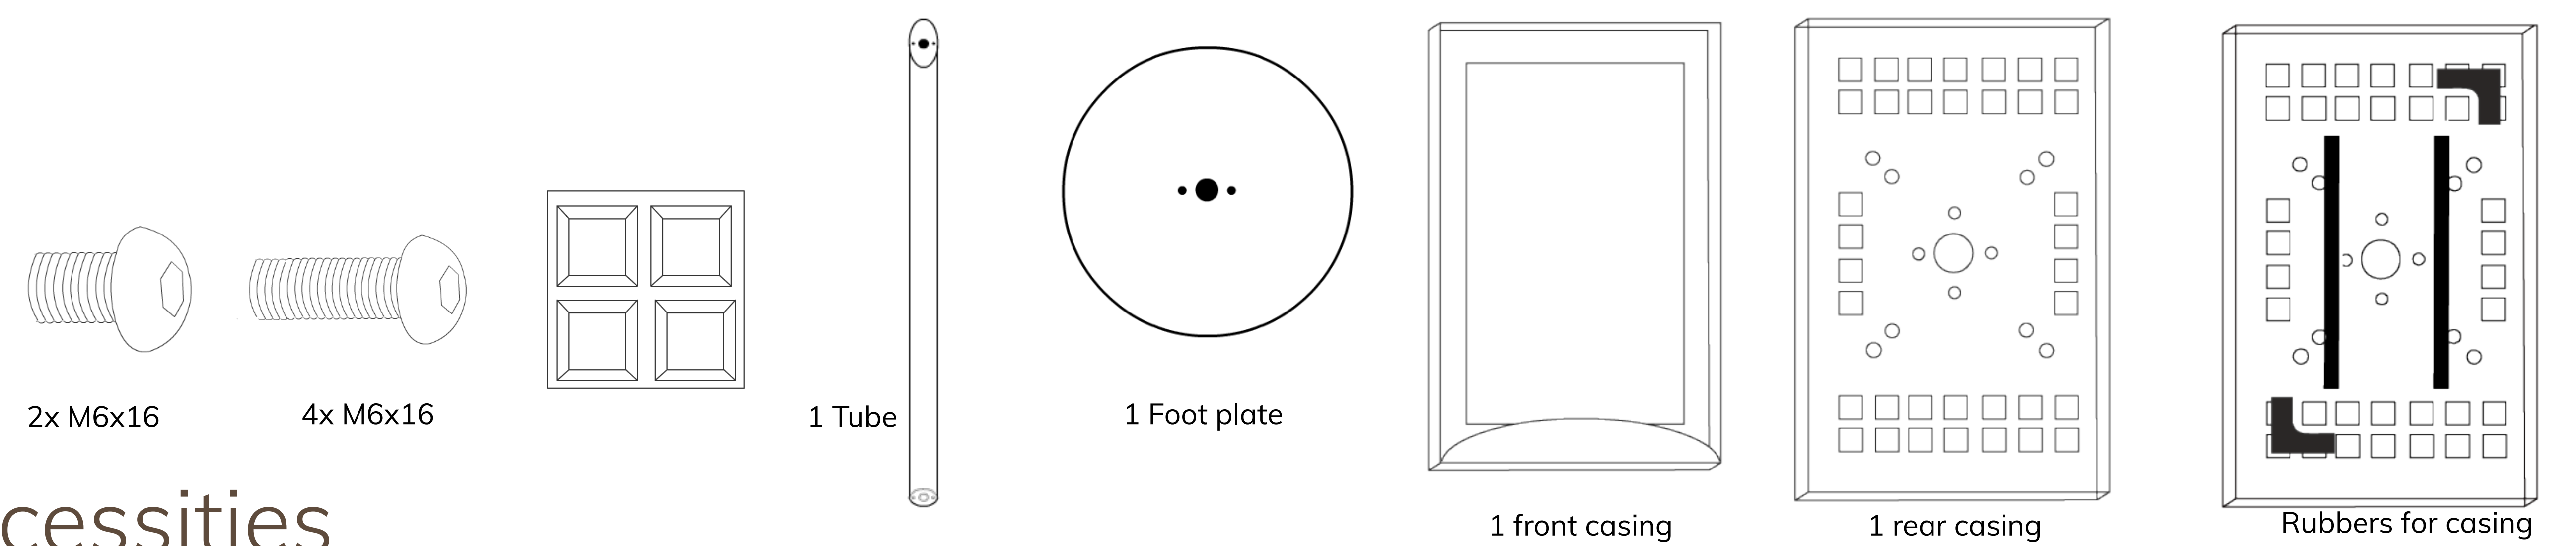

## Necessities

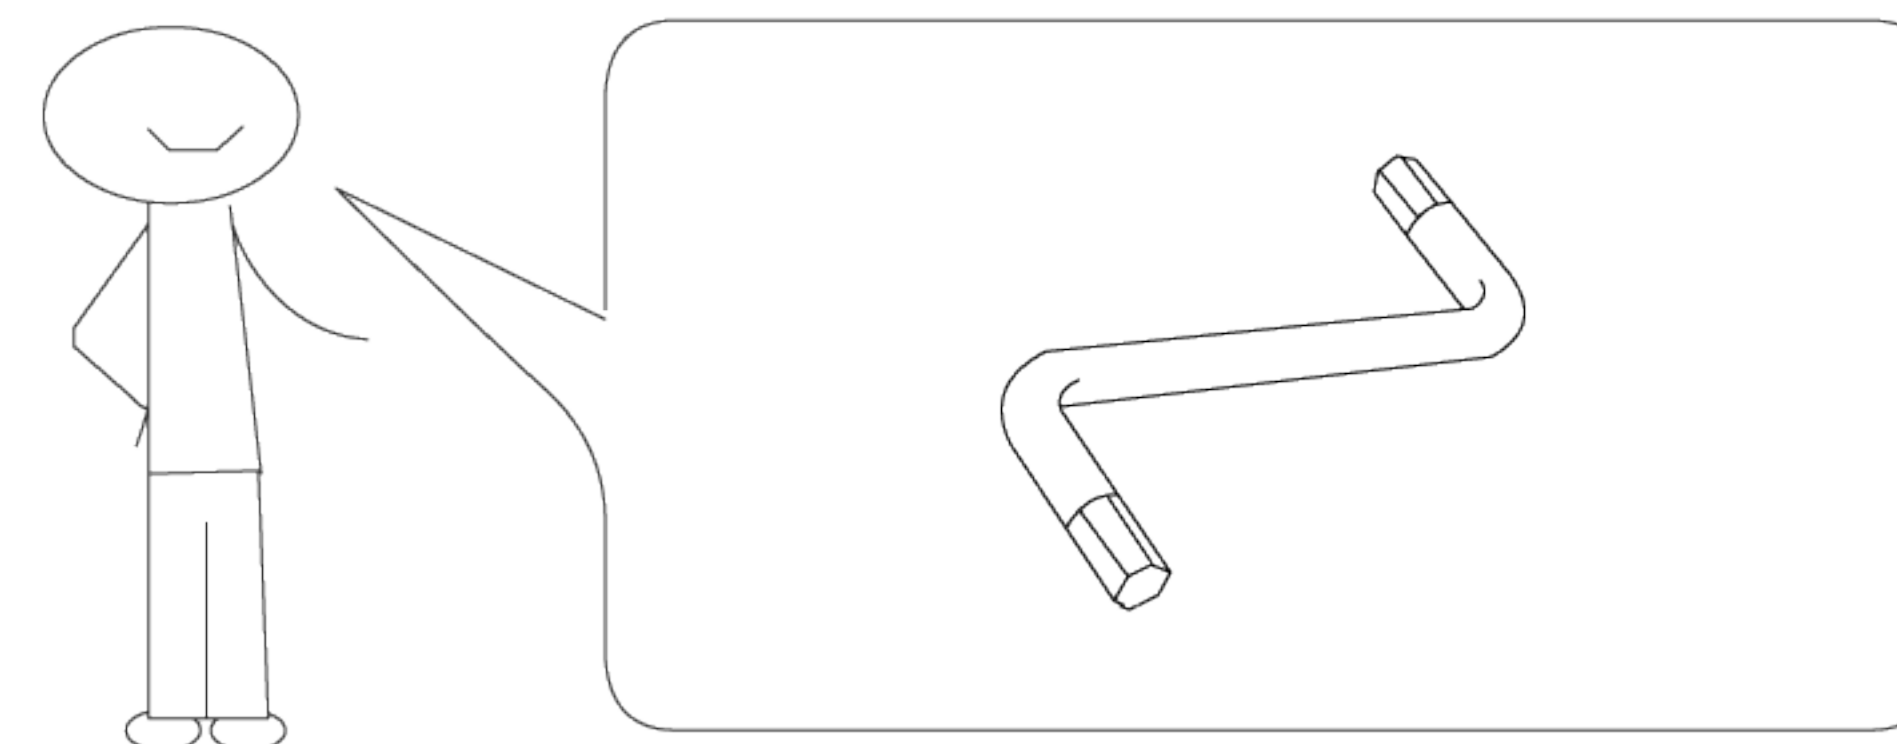


## Explanation

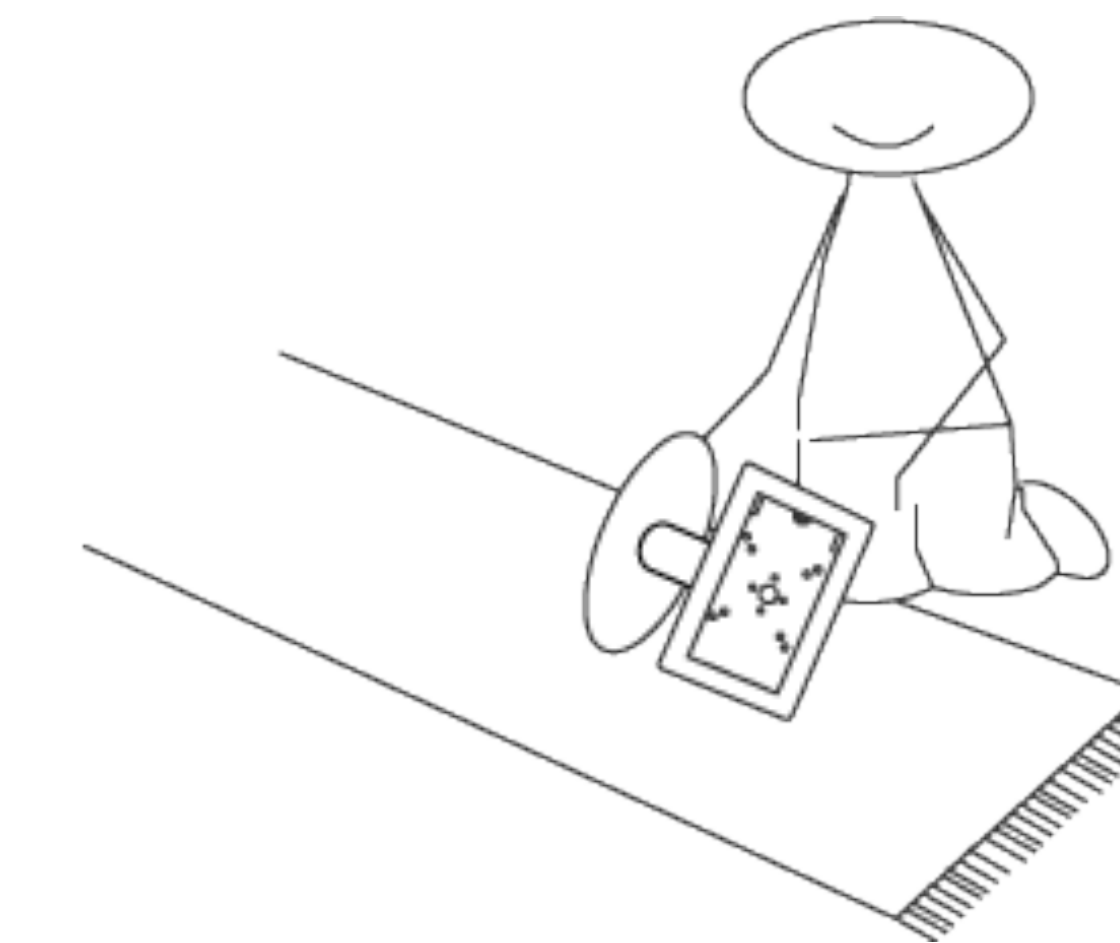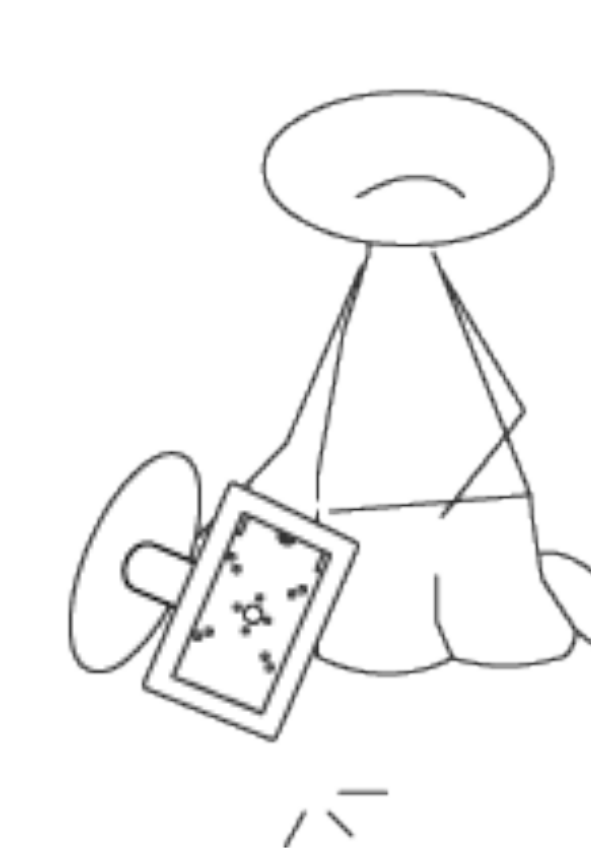


NOTE: Use a soft underlayment during assembly to avoid damage


Before you start **Determine and fix cell rubbers position with tablet in the exact middle of the casing.**  
(For reference See manual - Securo Fixing the rubbers)

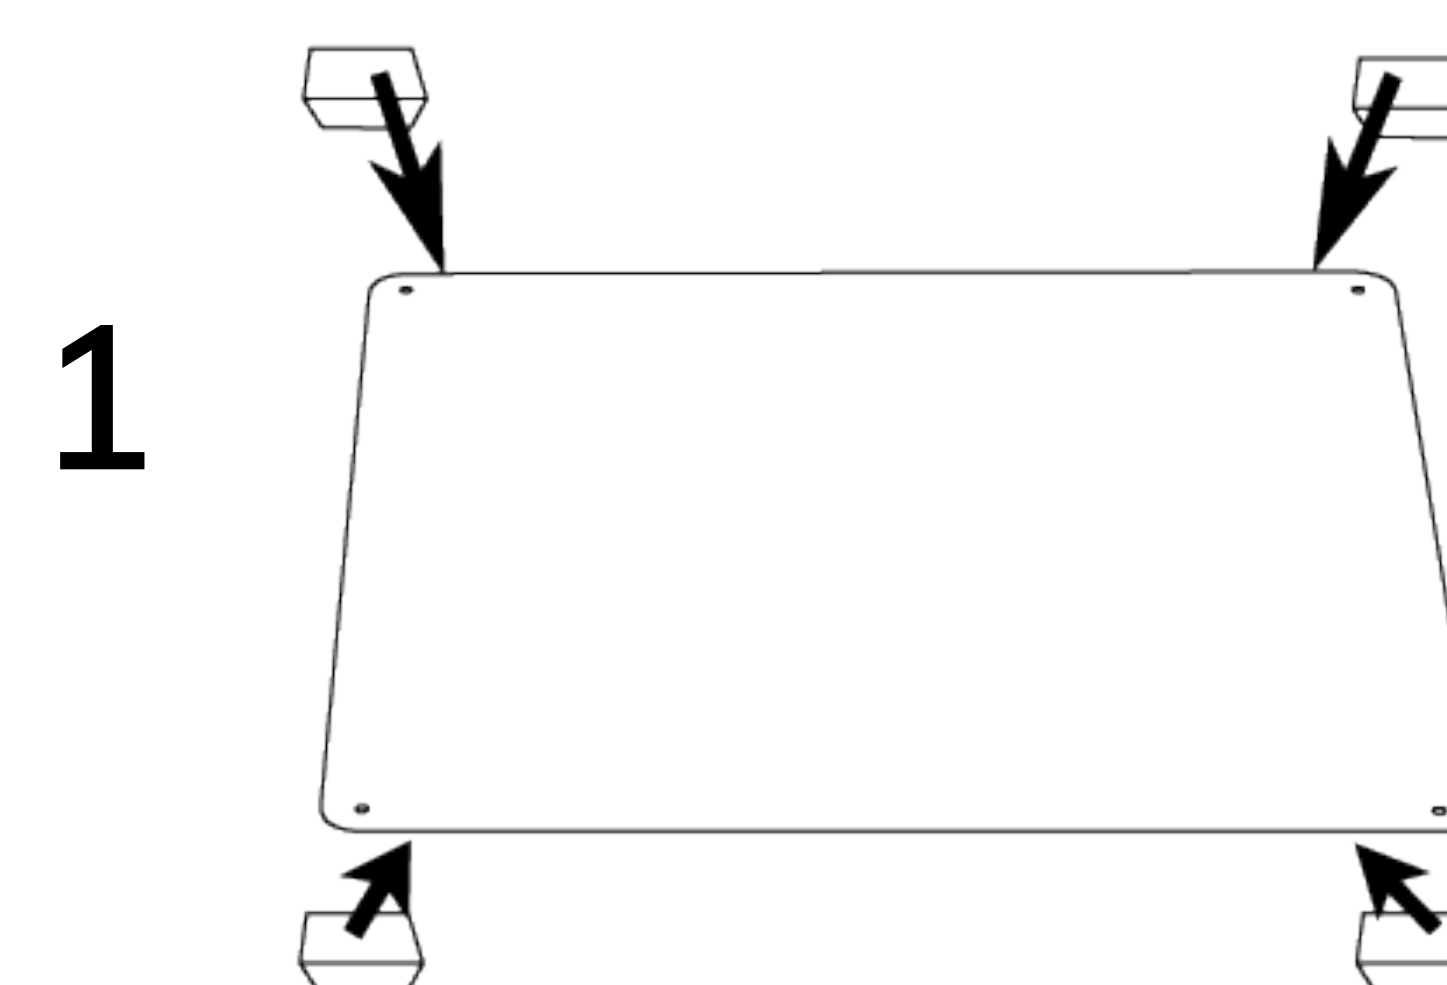


2

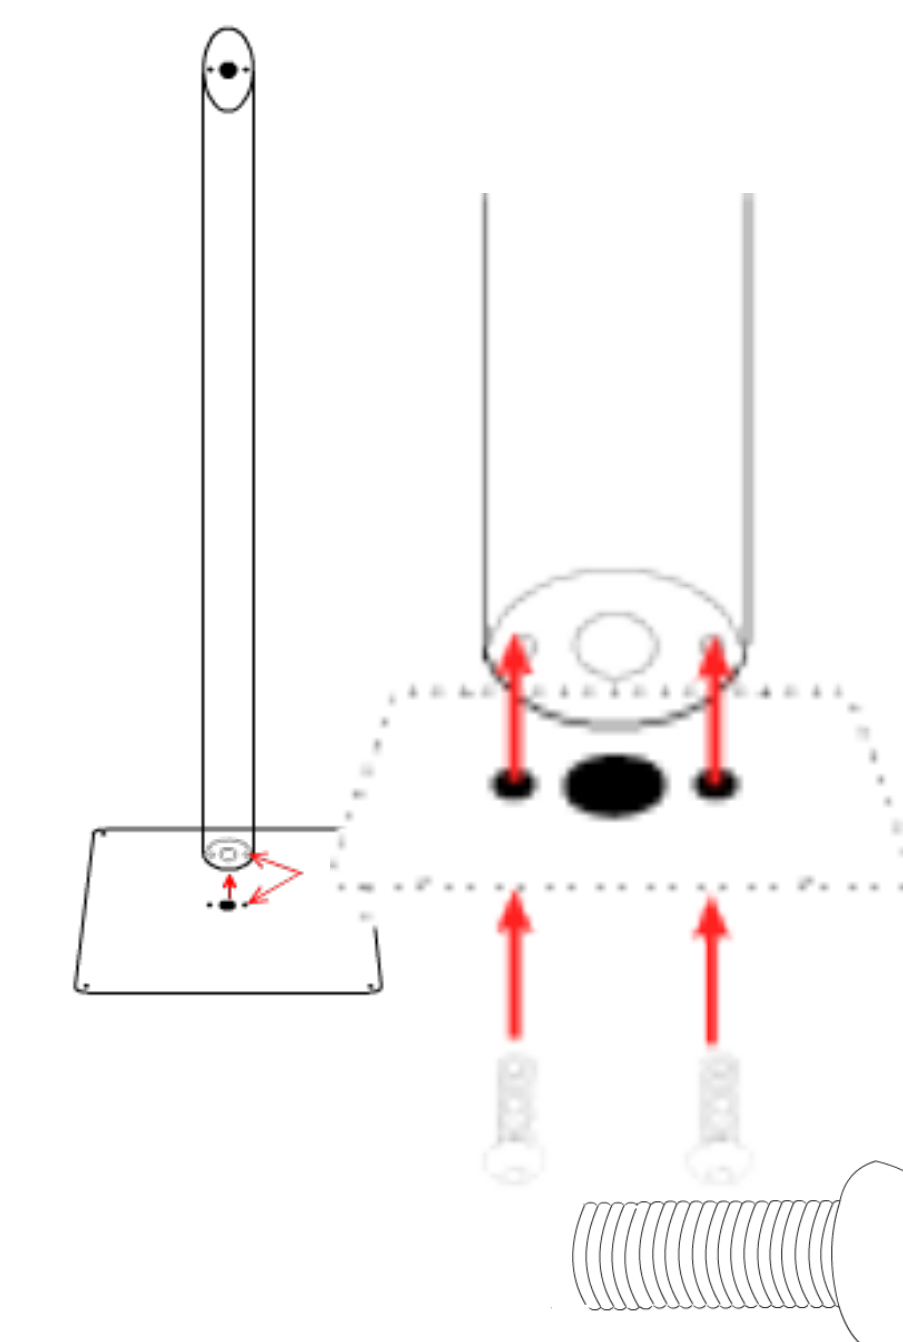


3

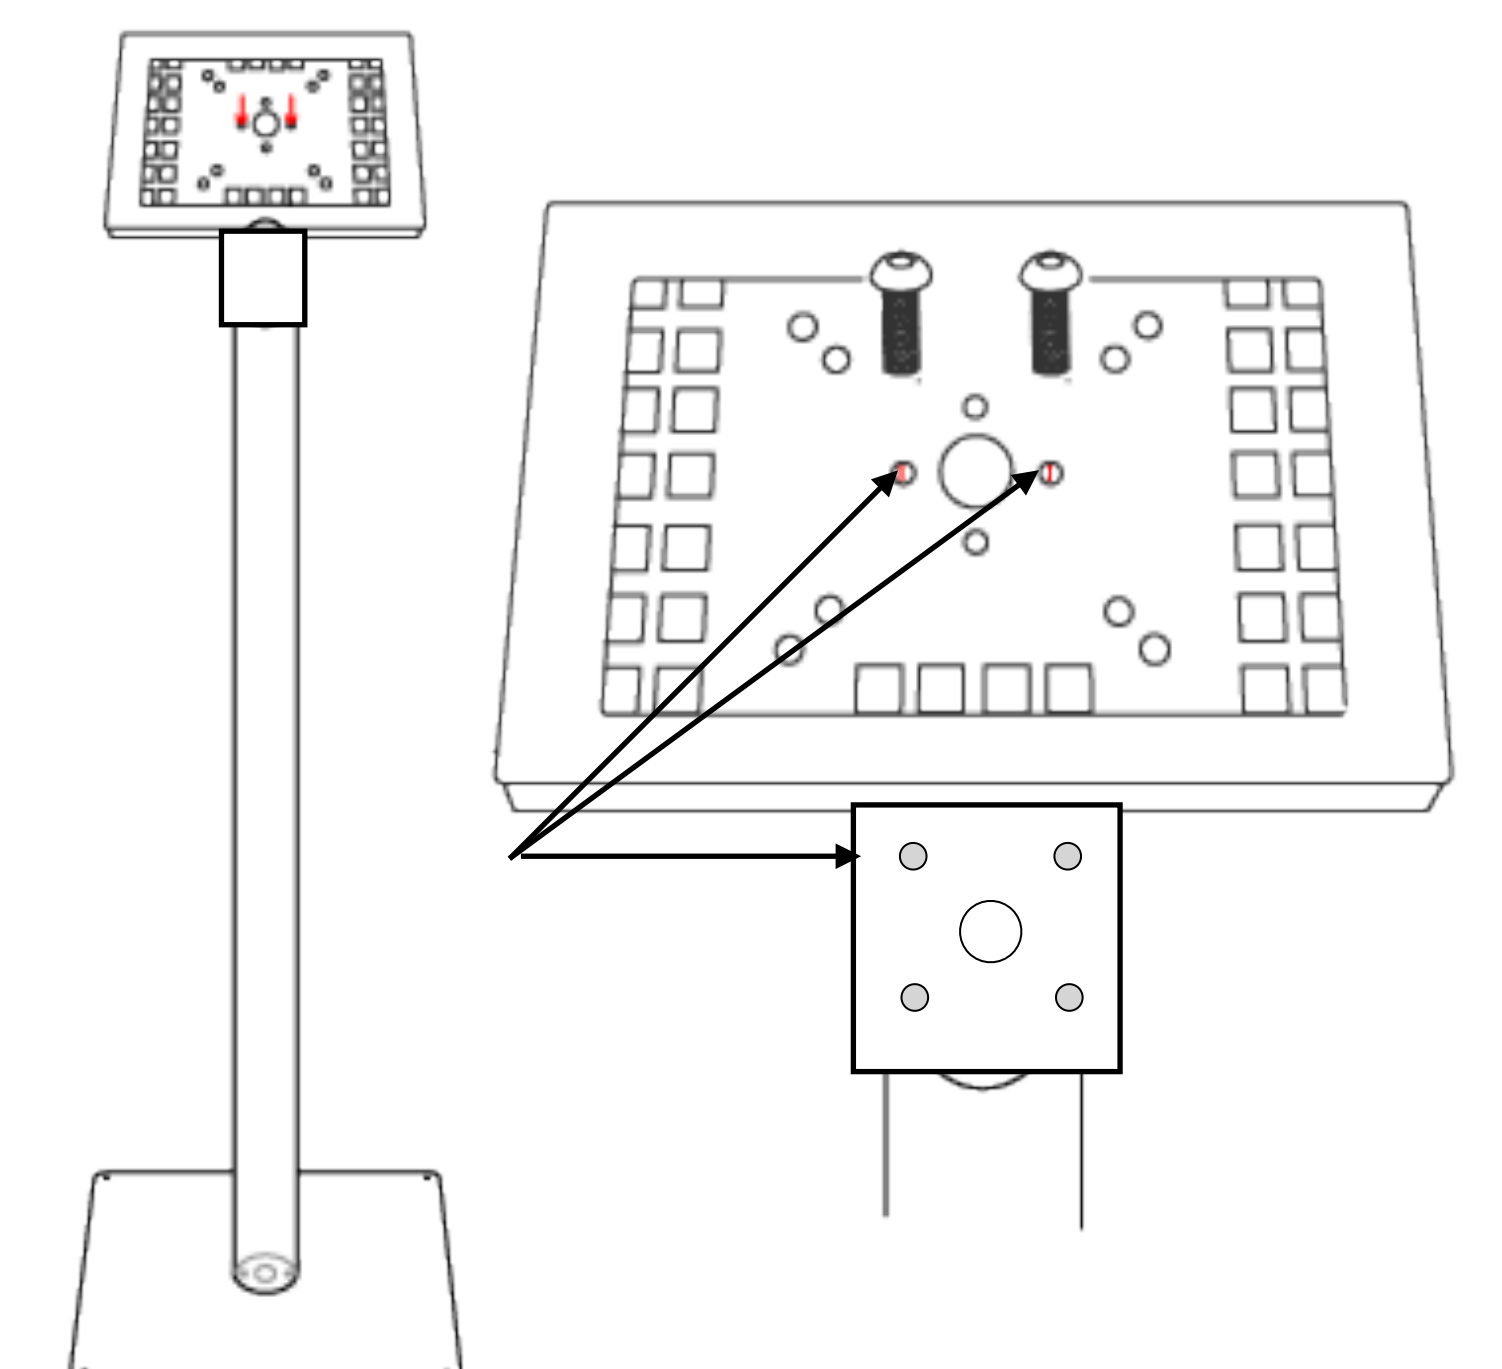


4

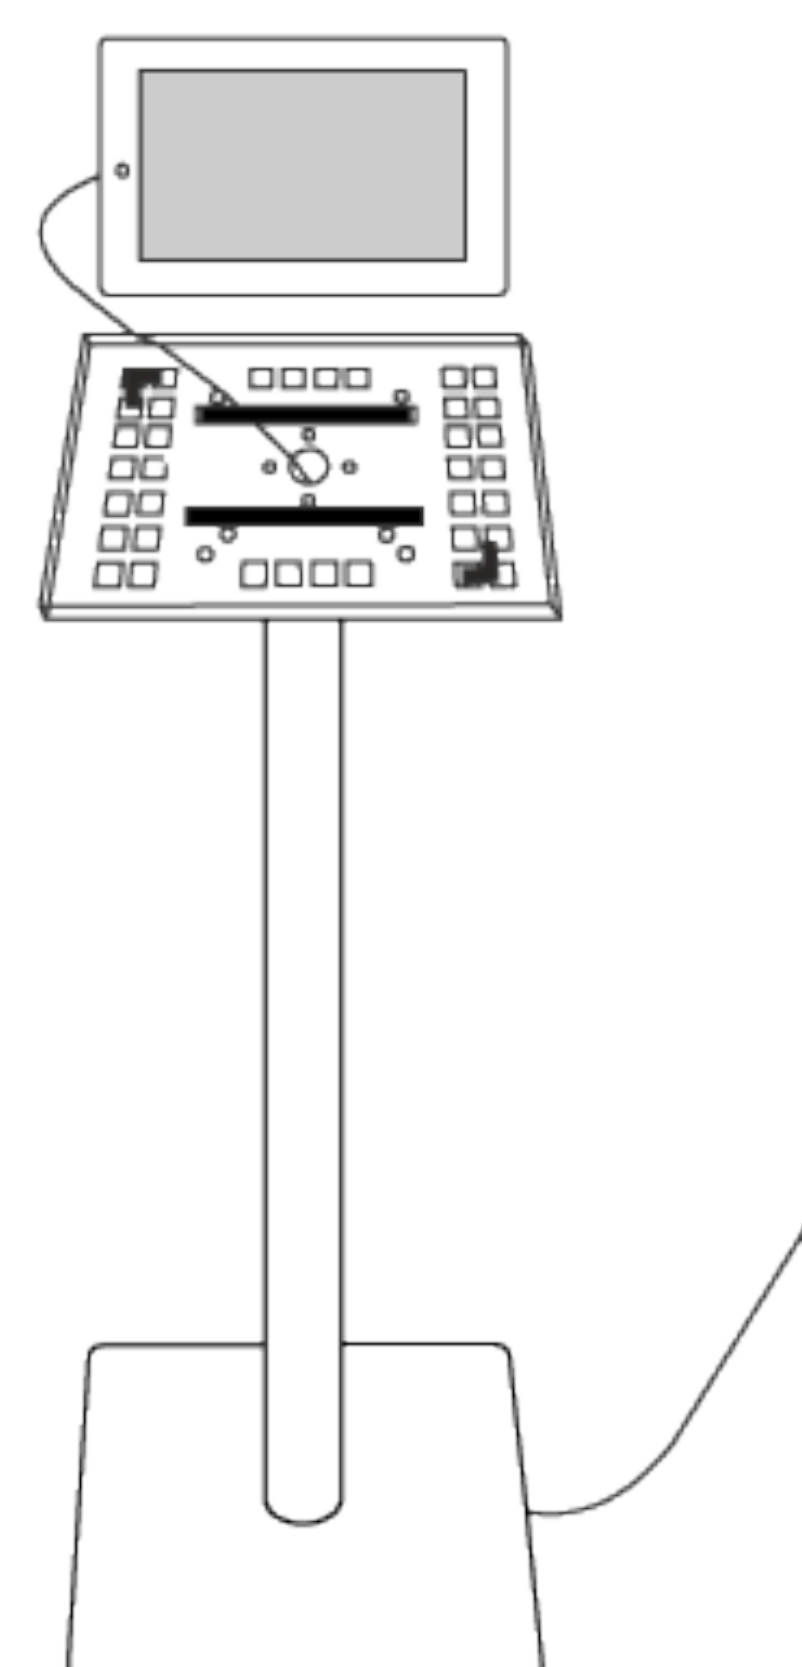

5

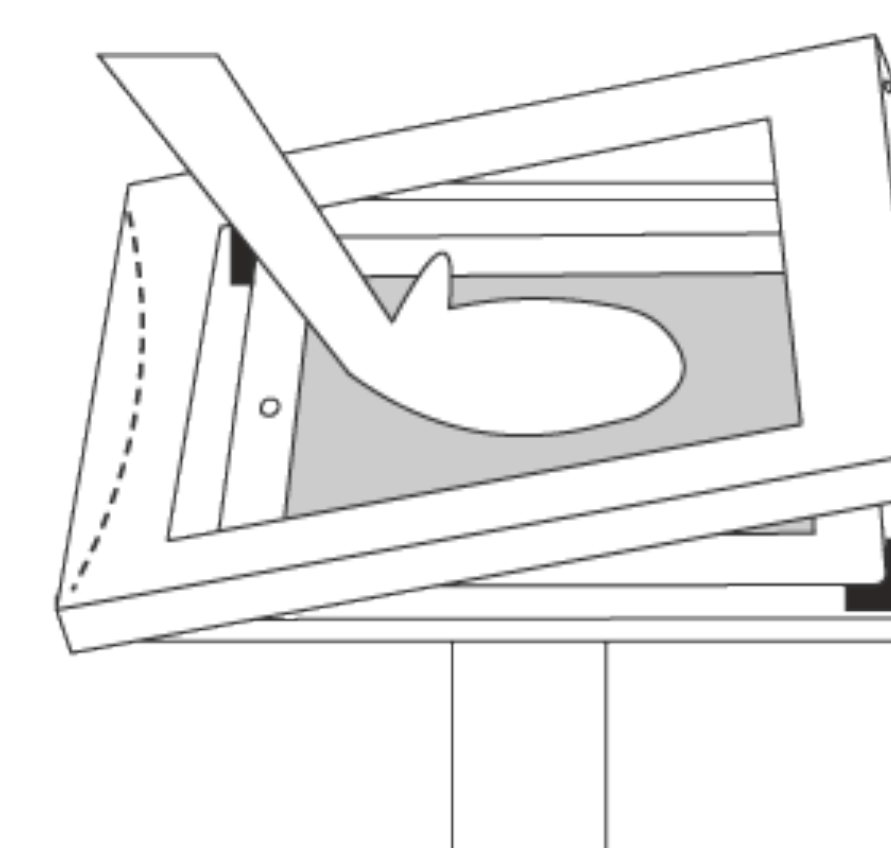

6

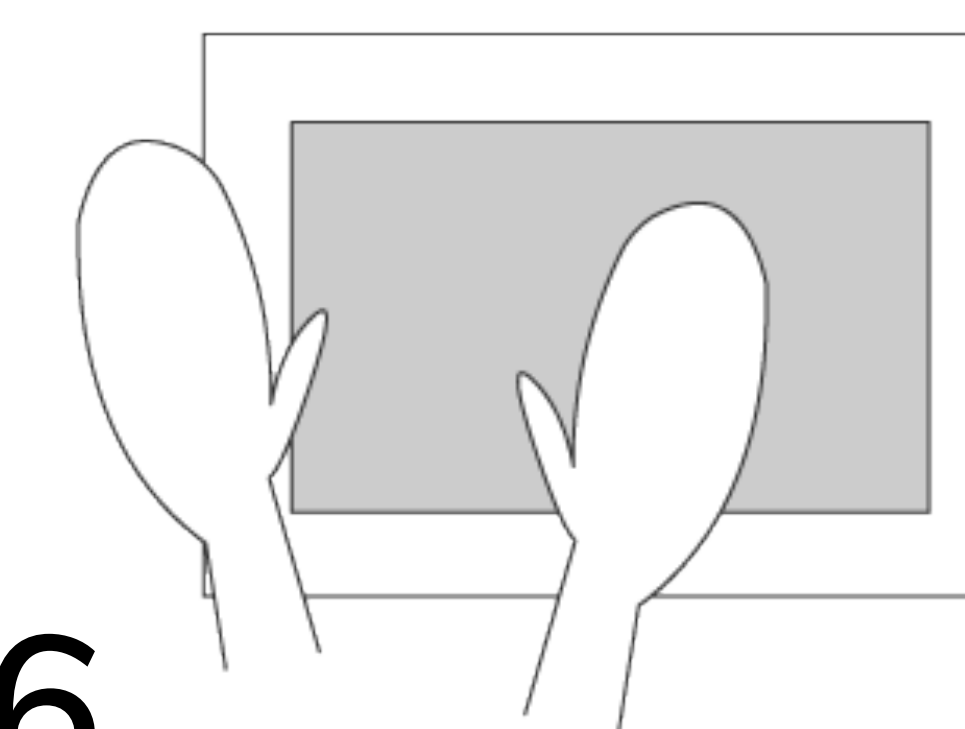

7

