
SECURO 7"-8" DESK STAND

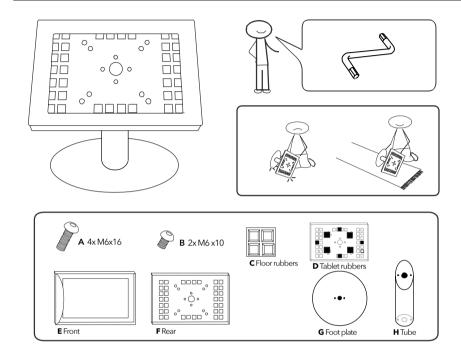



Before you start: Determine and fix cell rubbers [**D**] position with tablet in the exact middle of the casing. (See manual - *Fixing the rubbers*) Also determine the postition of the screen; Portrait or landscape.

- **1 When not present:** Place floor rubbers [C] underneath the foot plate [G].
- 2 Fit plate [G] on flat side tube [H]. Use 2x [A] M6 x 16.
- **3** Fit the rear of the casing [F] on diagonal side tube [H]; Use 2x[A] M6 x 16.
- **4 Optional**: Guide power cable through hole in casing and tube to bottom. **Optional**: Install <u>additional</u> key lock (see manual Key lock)
- **5** Place tablet and fit front part [**E**] of the casing over the rear part [**F**], while pressing tablet onto cell rubbers [**D**].
- **6** Position tablet into casing without reducing the pressure on the tablet
- **7** Fasten both parts of the casing with screws; Use 2x [**B**] M6 x 10. And/or close the additional key lock

